

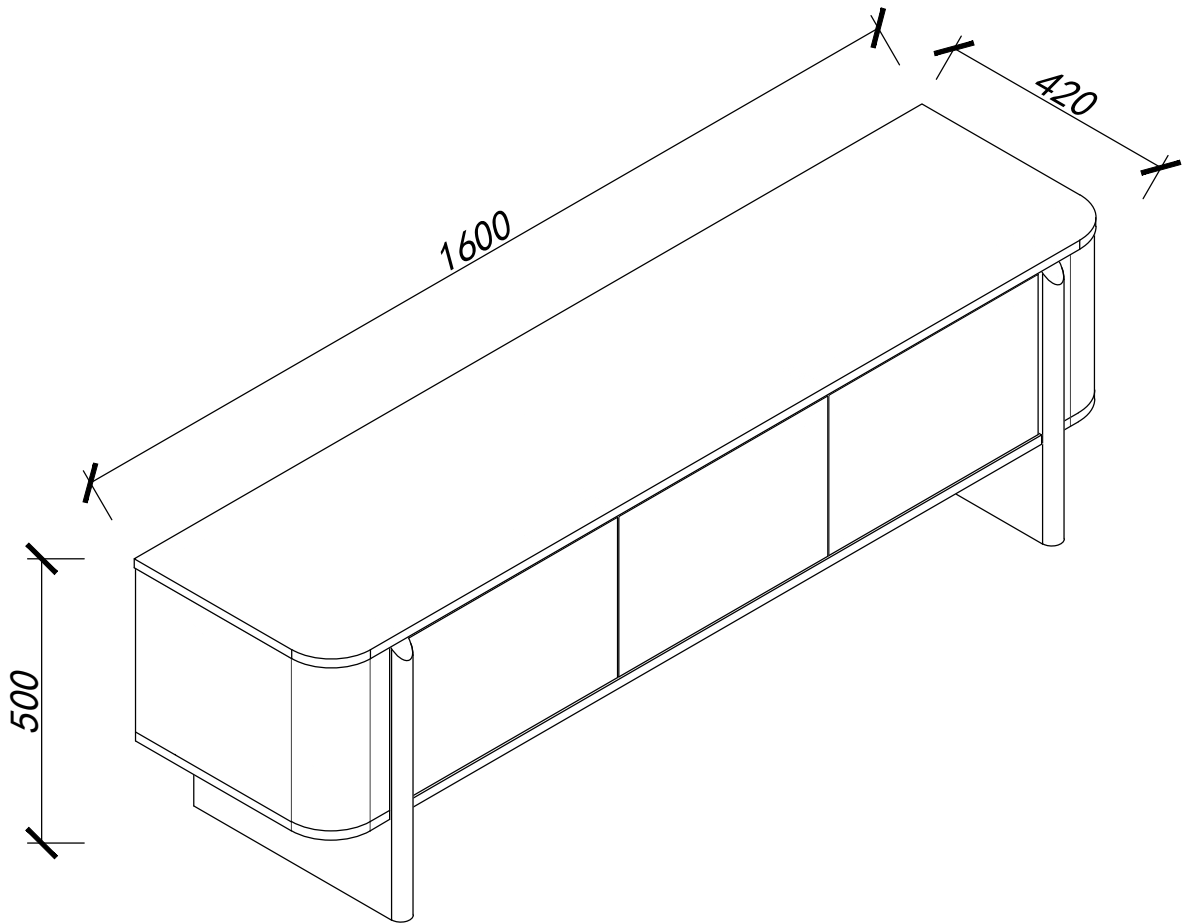
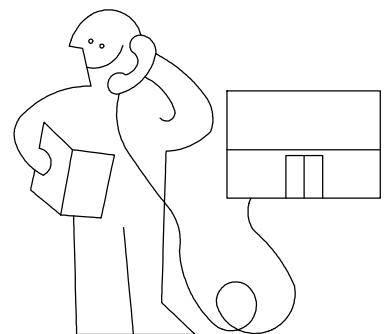
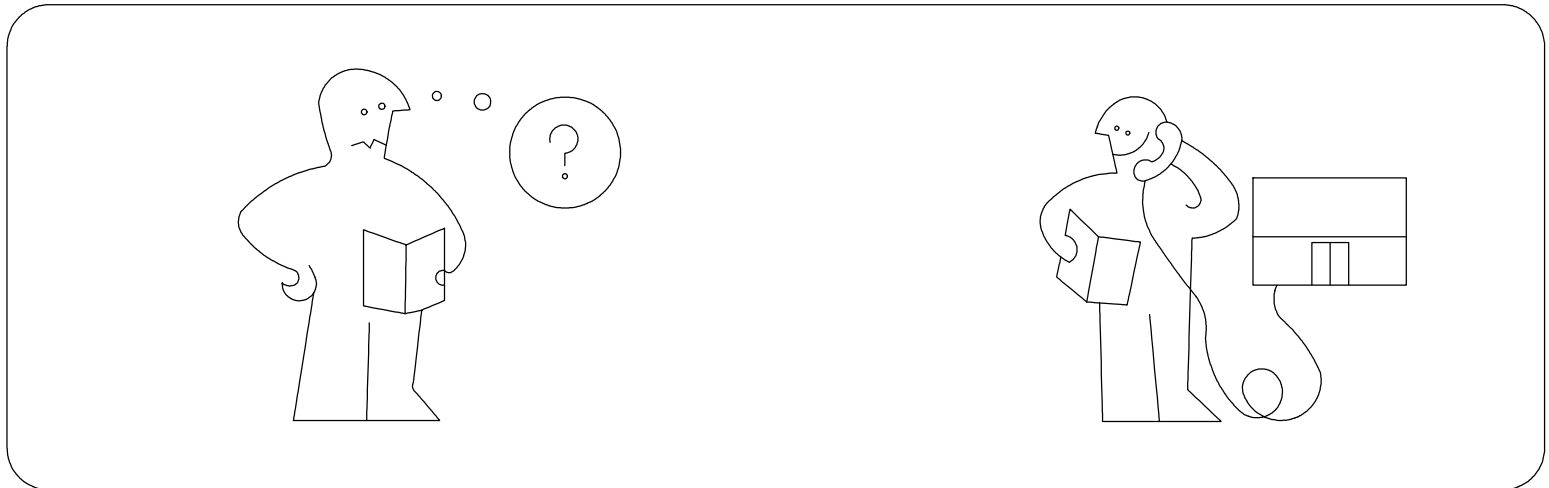
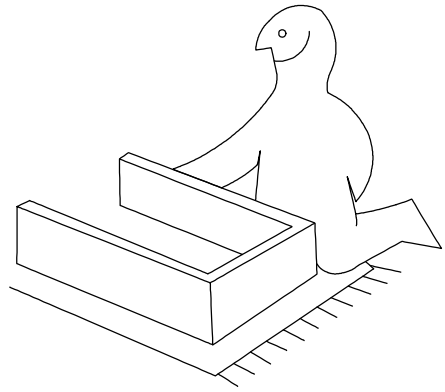
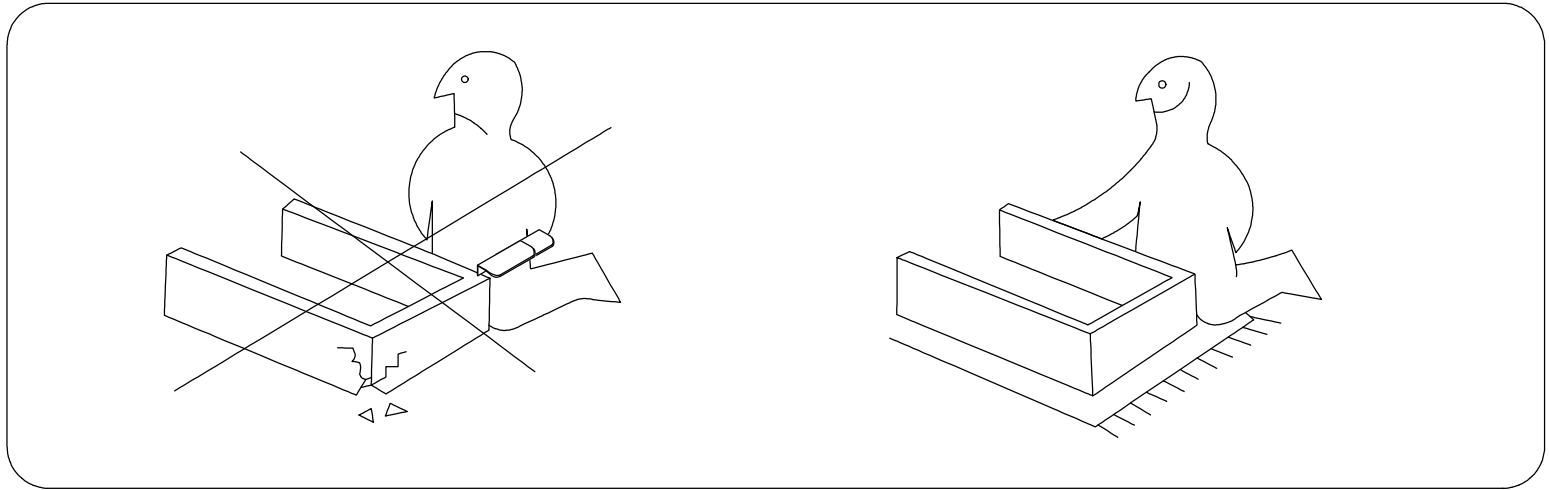
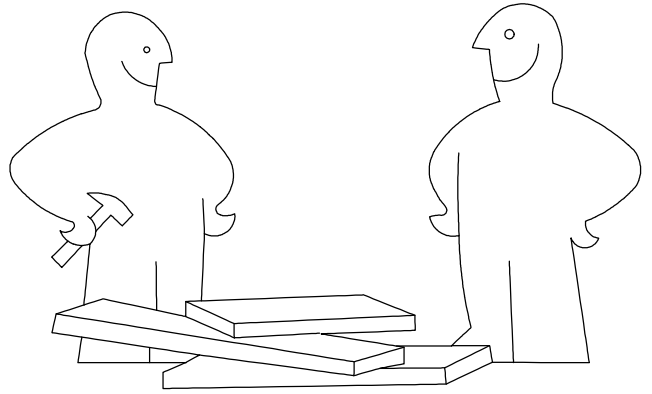
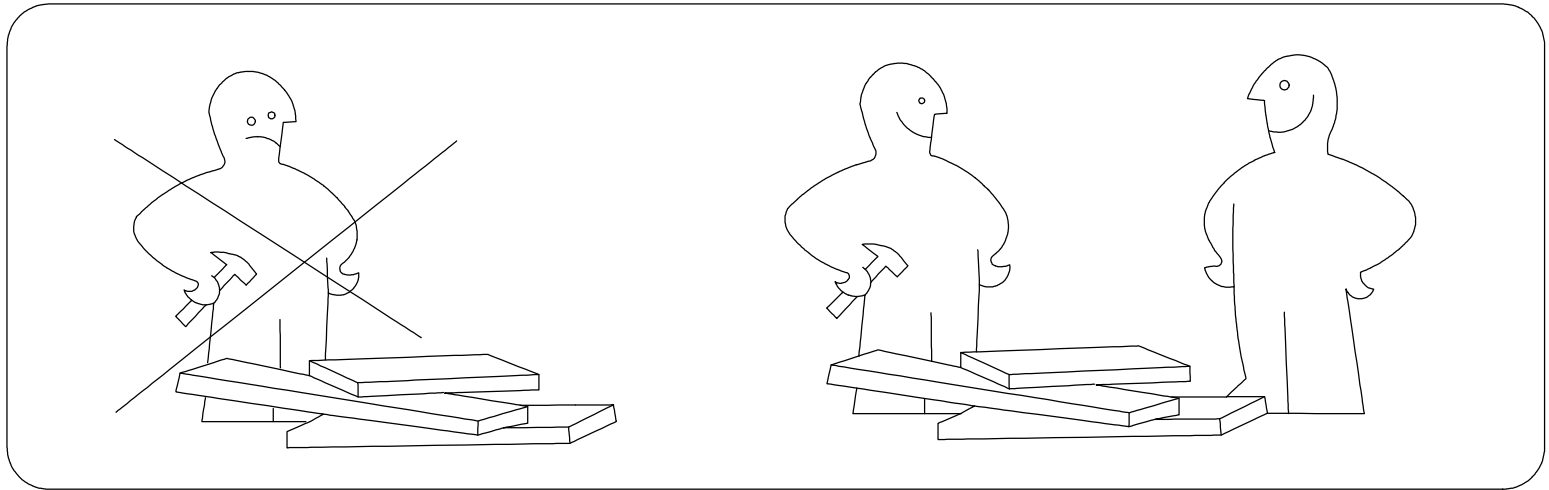


sømcasa


Assembly Instruction

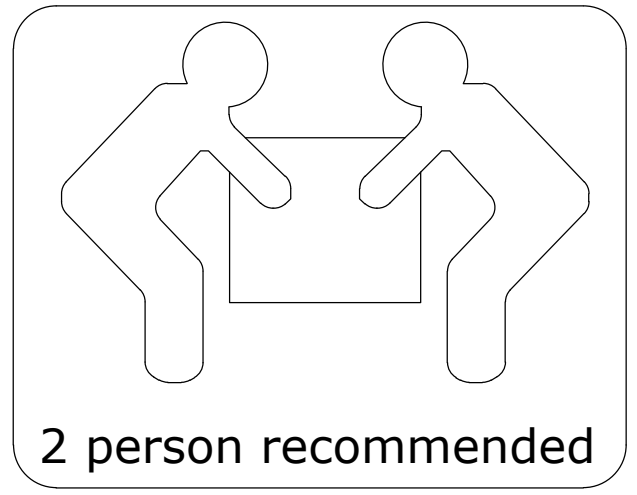

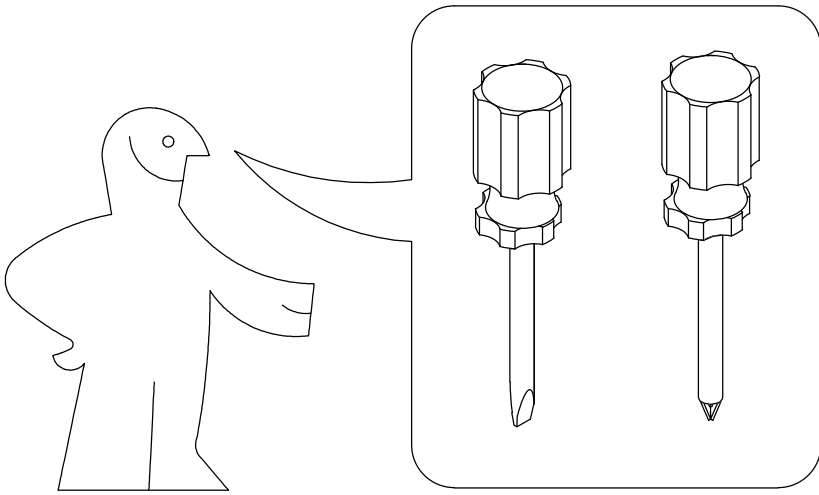

Panel No	Panel Sizes	Quantity
1	1600*400*16	1
2	1286*400*16	1
3	304*396*120	1
4	304*396*120	1
5	288*357*16	1
6	288*357*16	1
7	479*420*36	1
8	479*420*36	1
9	418*350*16	2

Panel No	Panel Sizes	Quantity
10	409*350*16	1
11	1286*60*18	1
12	1286*100*18	1
13	152*60*16	2
14	1296*298*5	1
15	282*425*16	1
16	282*425*16	2

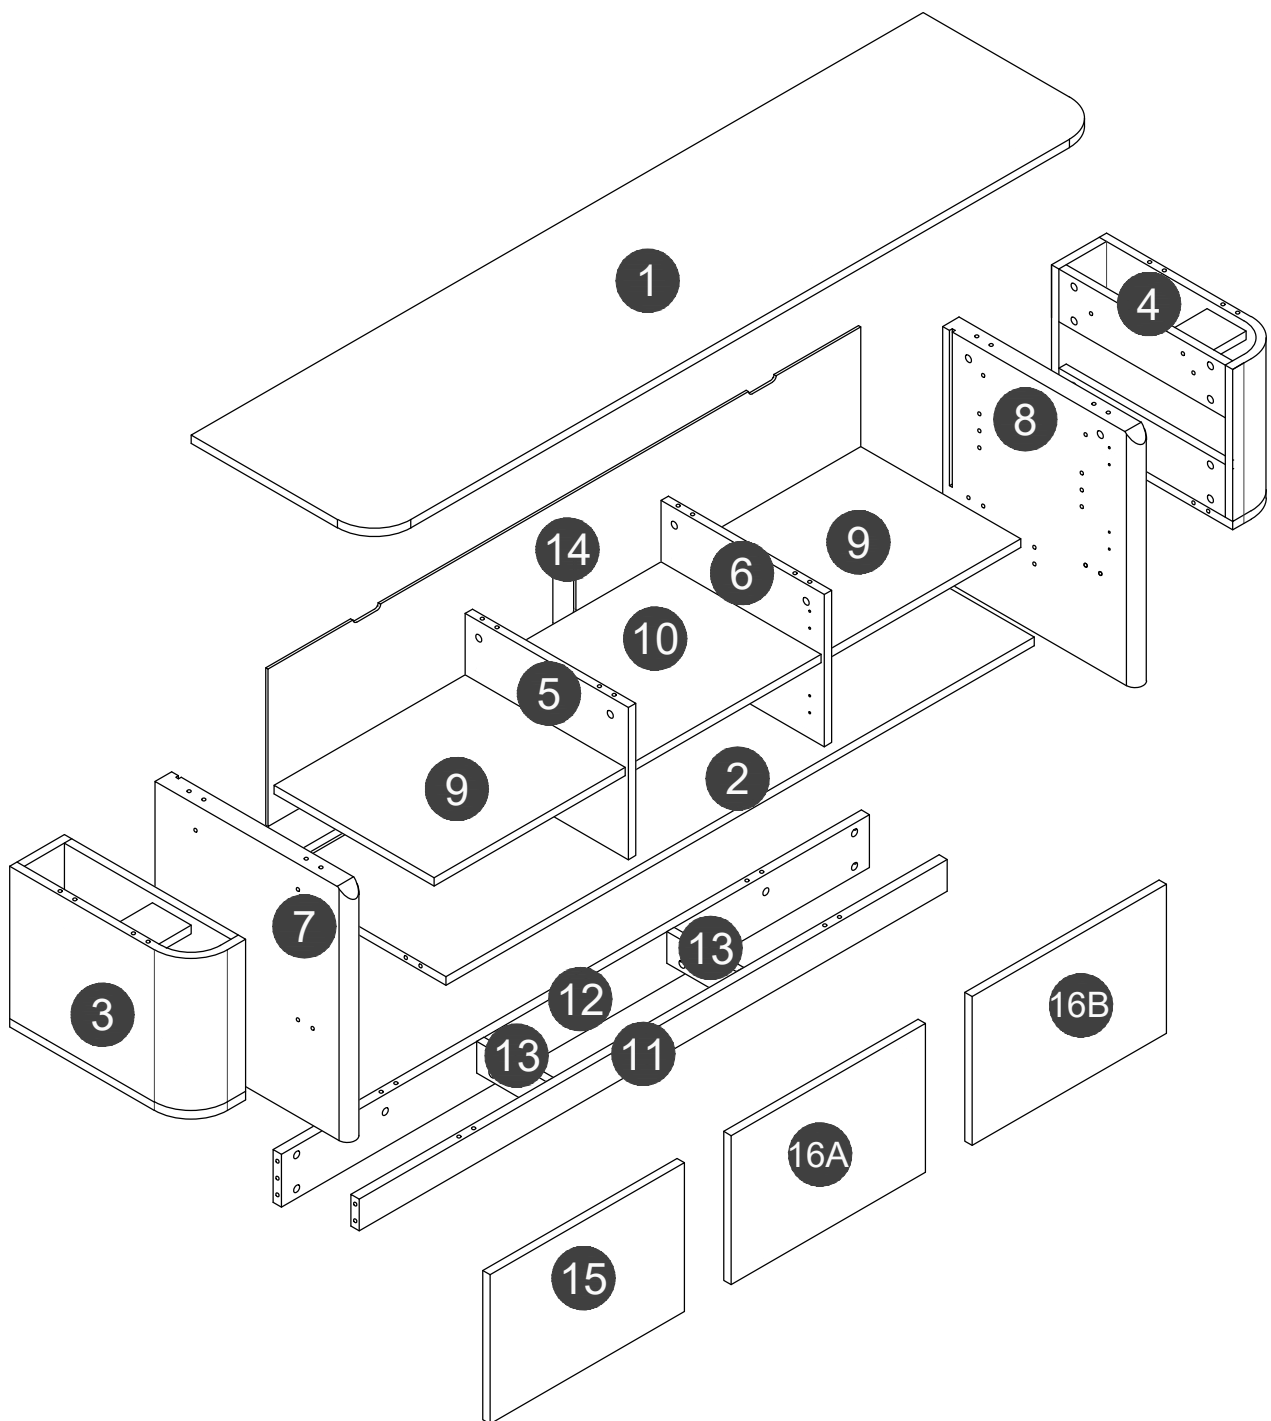


Fittings



M6*40

A1=32




Φ8*40

A2=4



Φ8*30

B=36

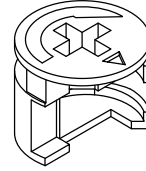


Φ15*12

C=32




Φ21

D=32

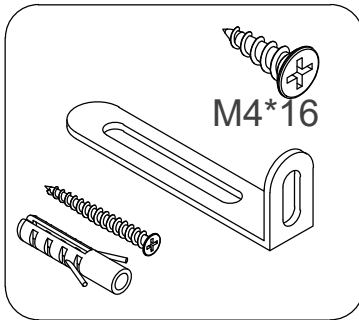


M4*16

F2=2

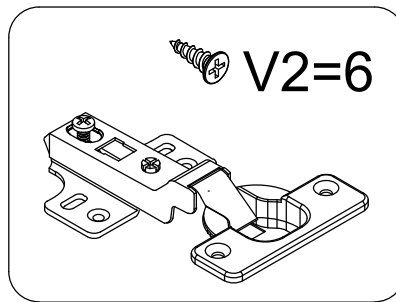


V2=6

I2=2

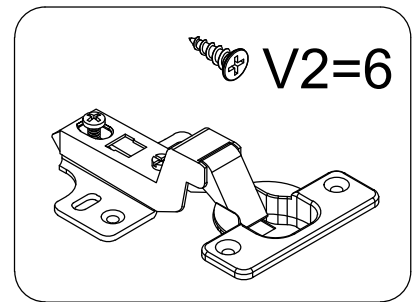


V2=6


I3=4

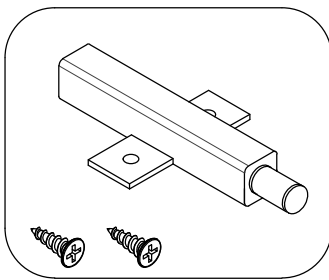


K=3

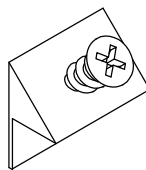


E=10

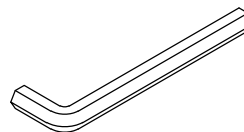

H=1

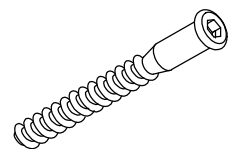


Q=8

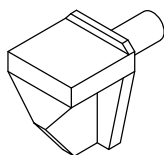


L=12


STEP 1

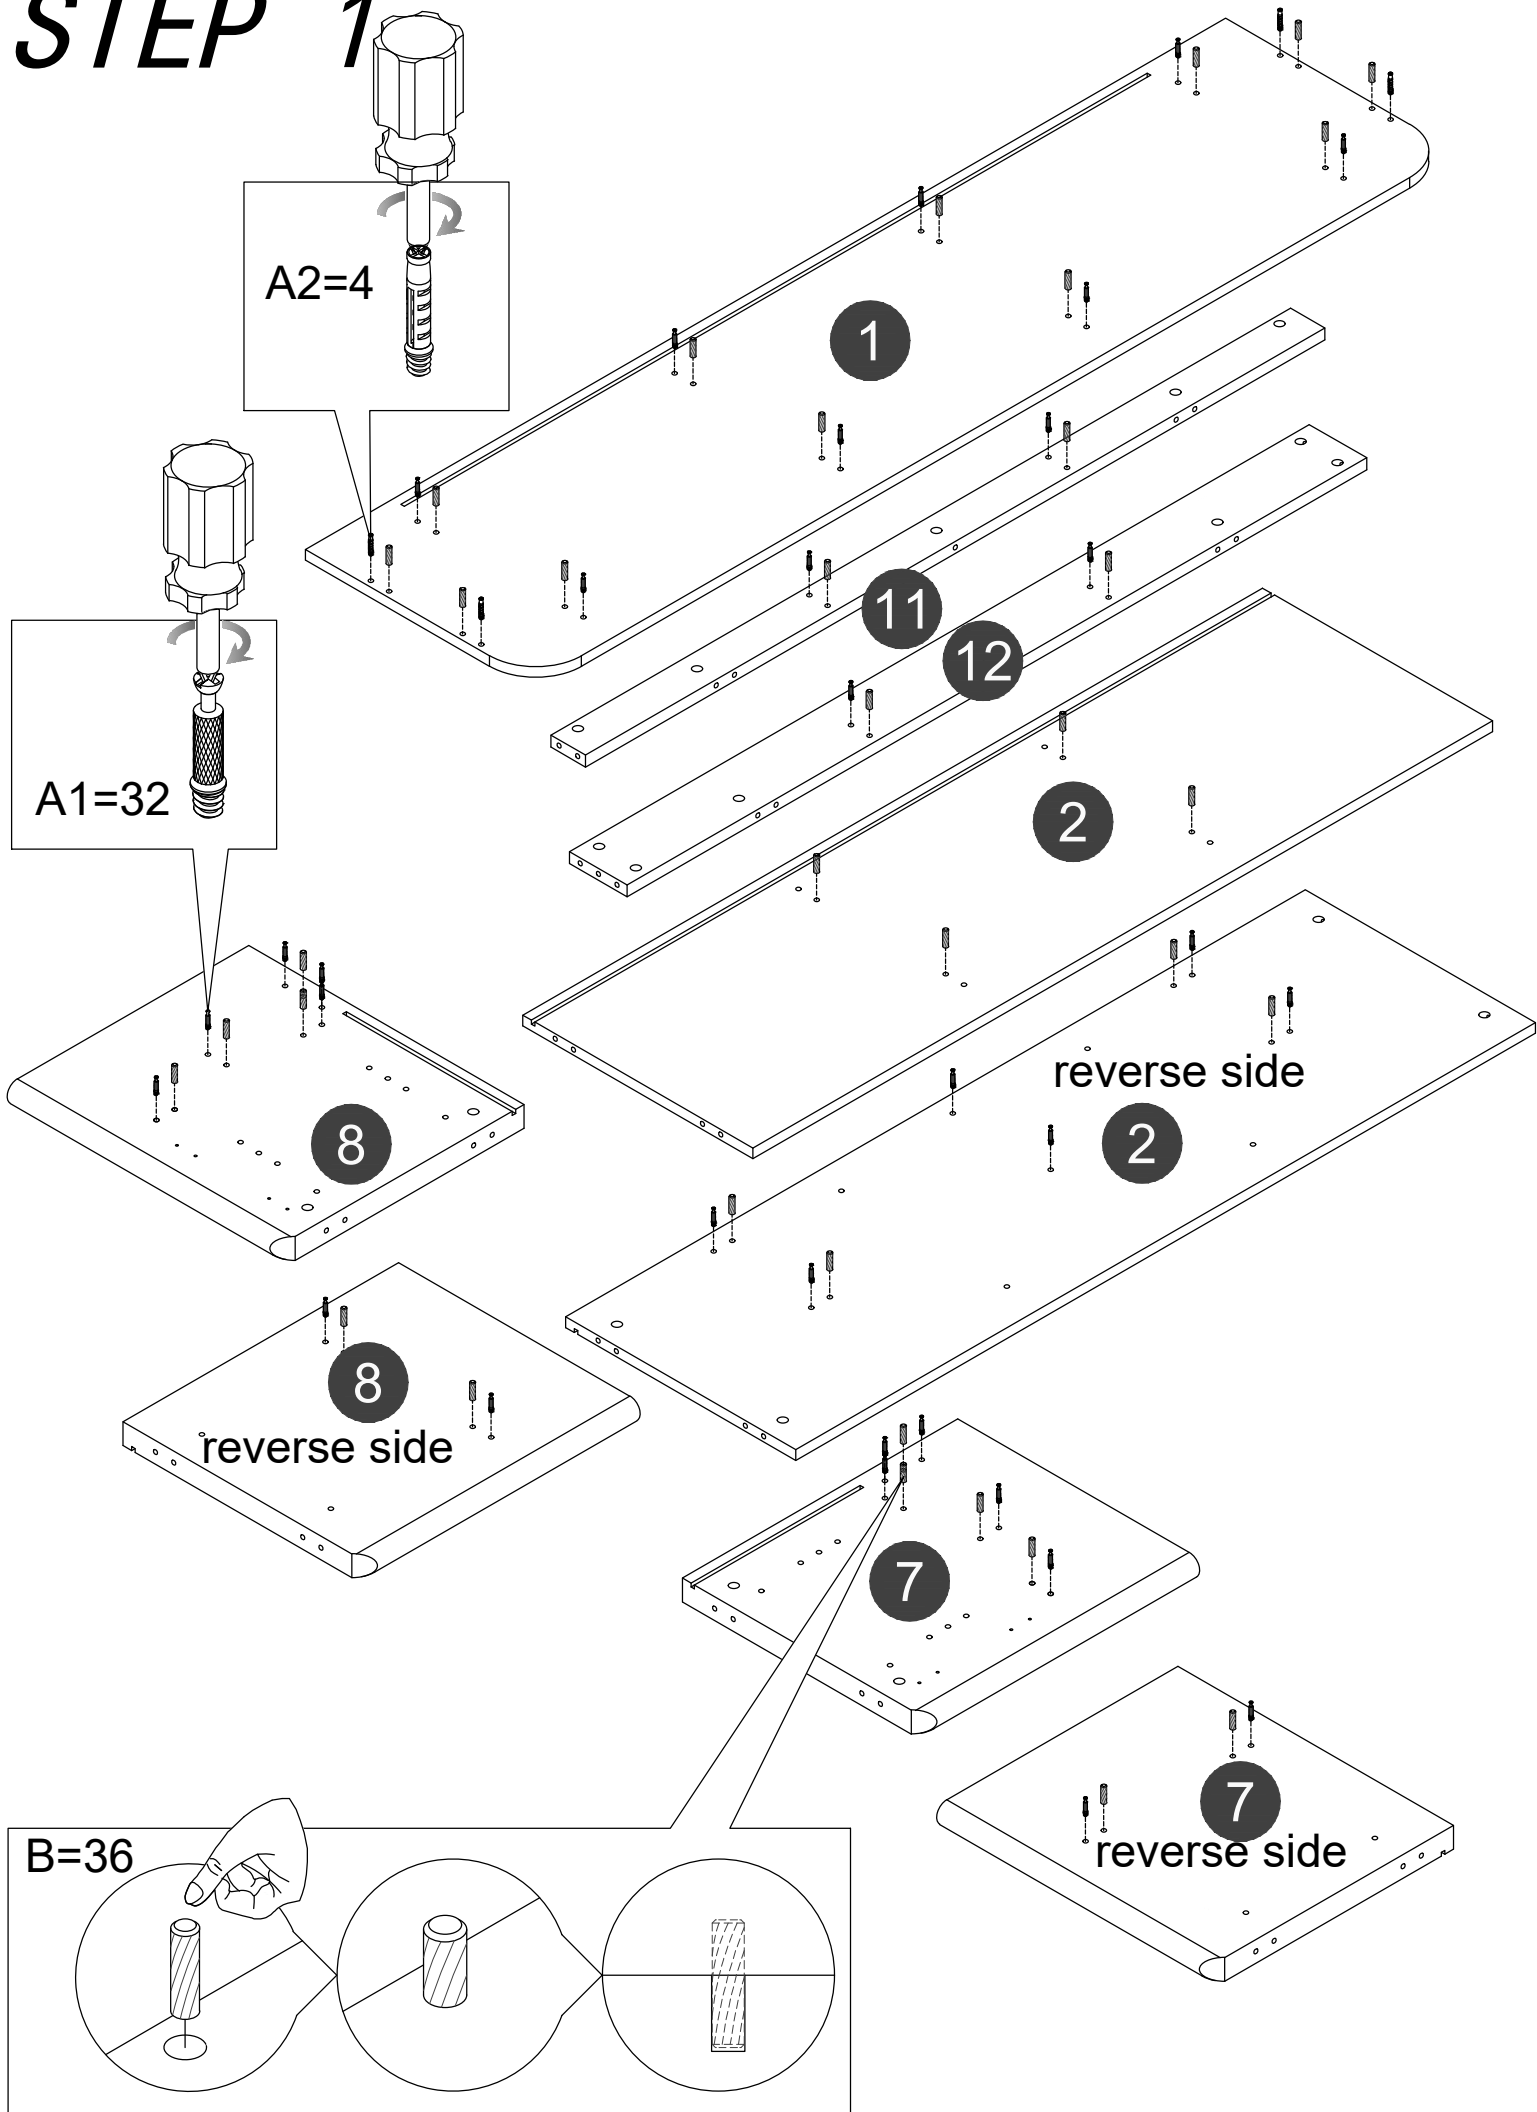


STEP 2

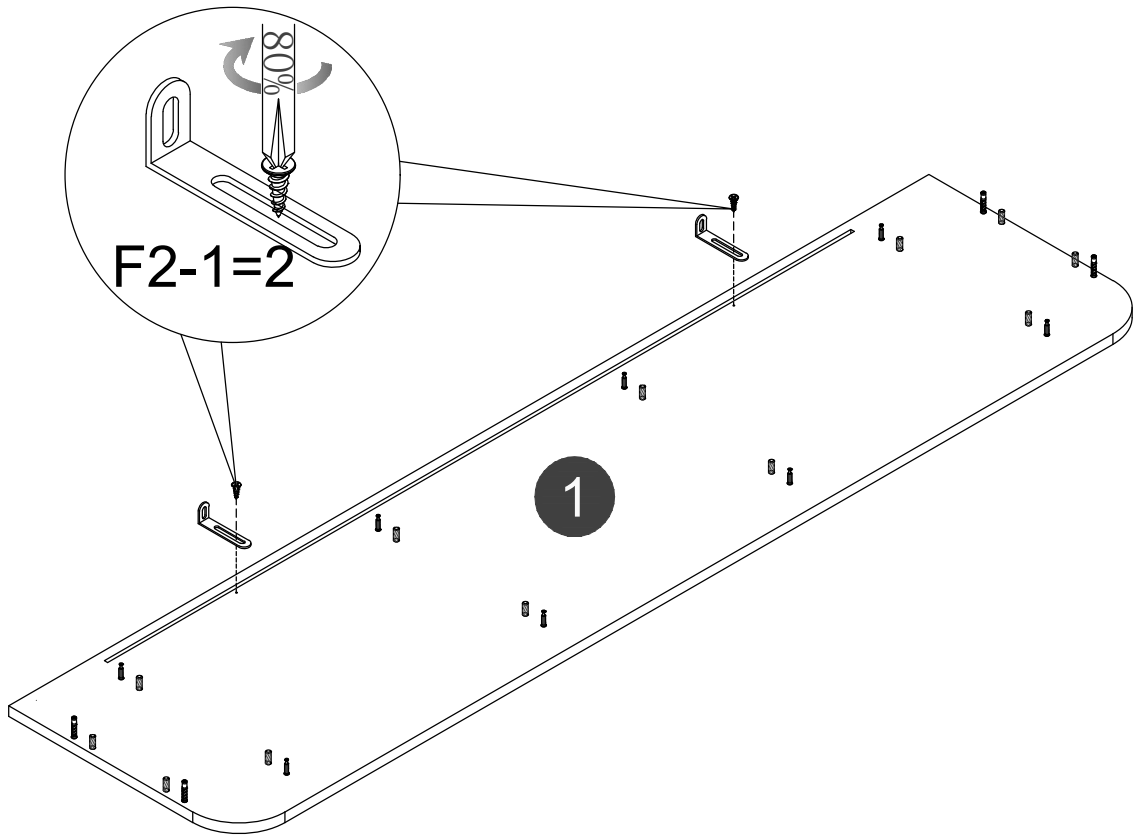


STEP 3

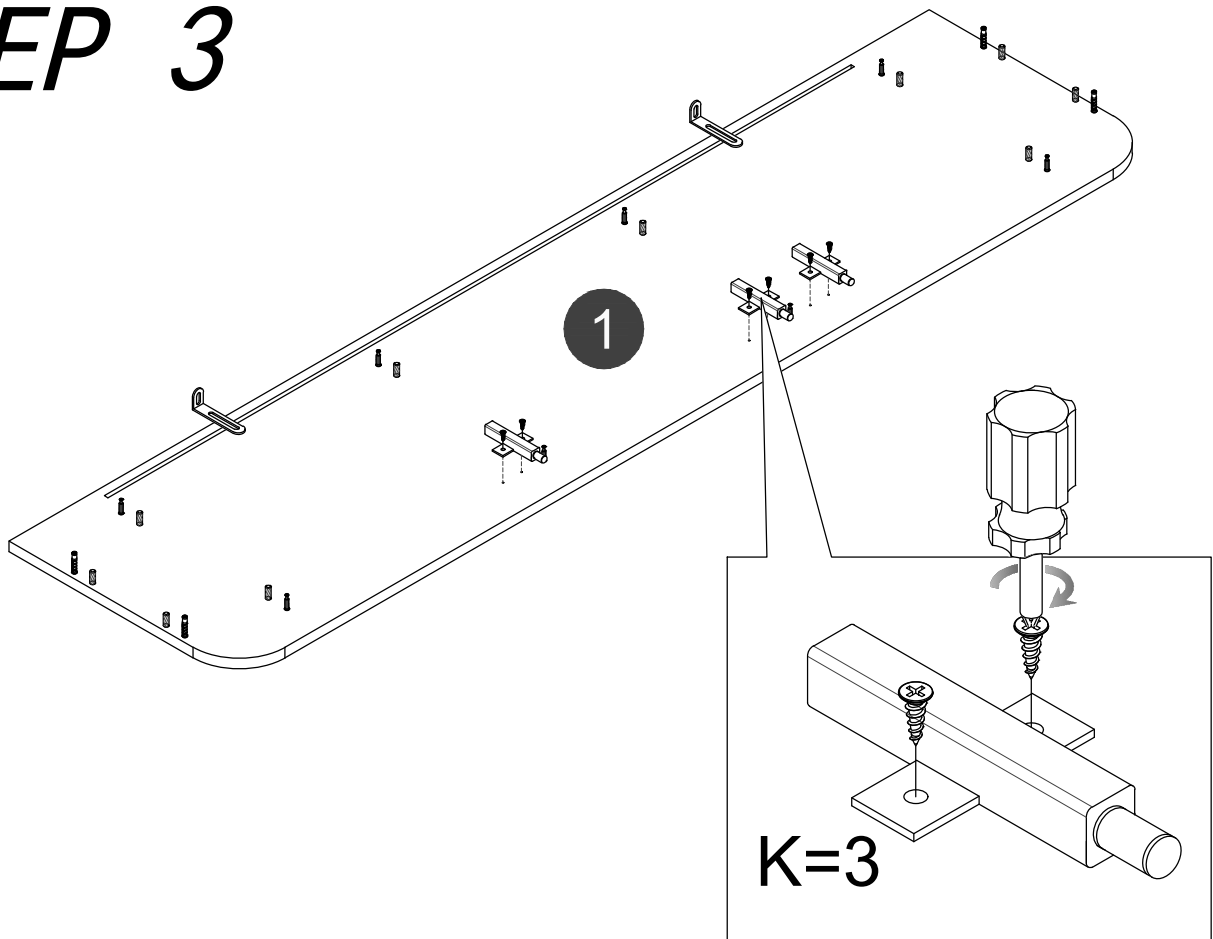


STEP 4

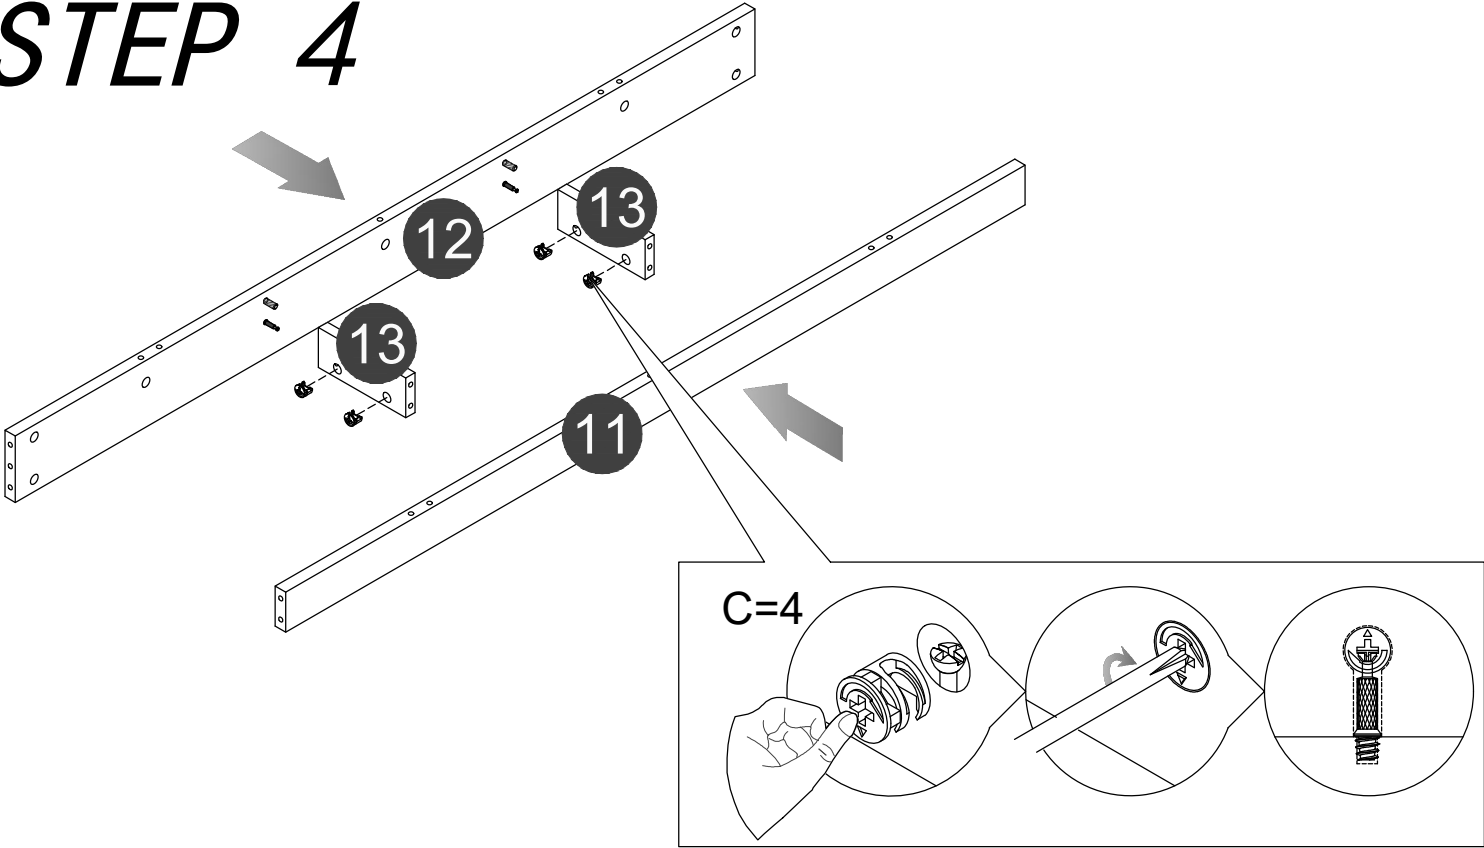


STEP 5

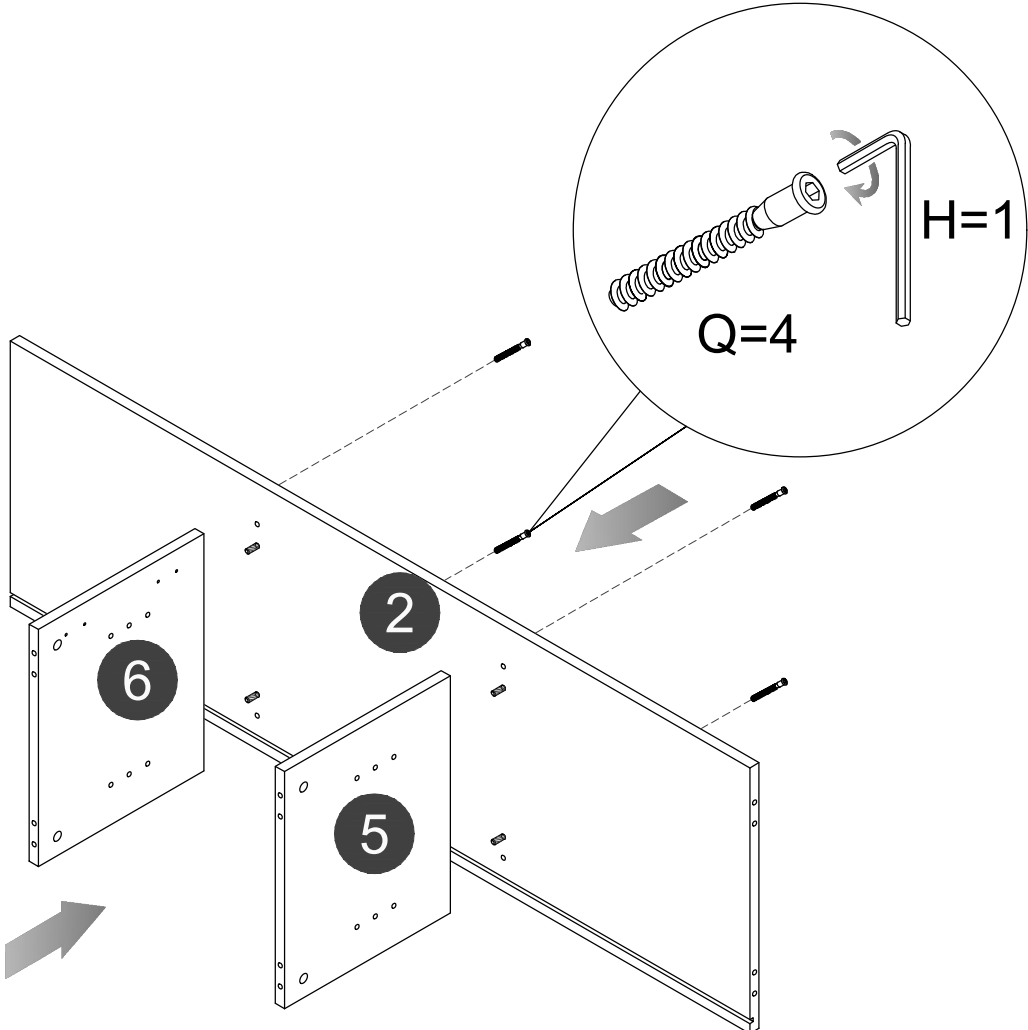


STEP 6

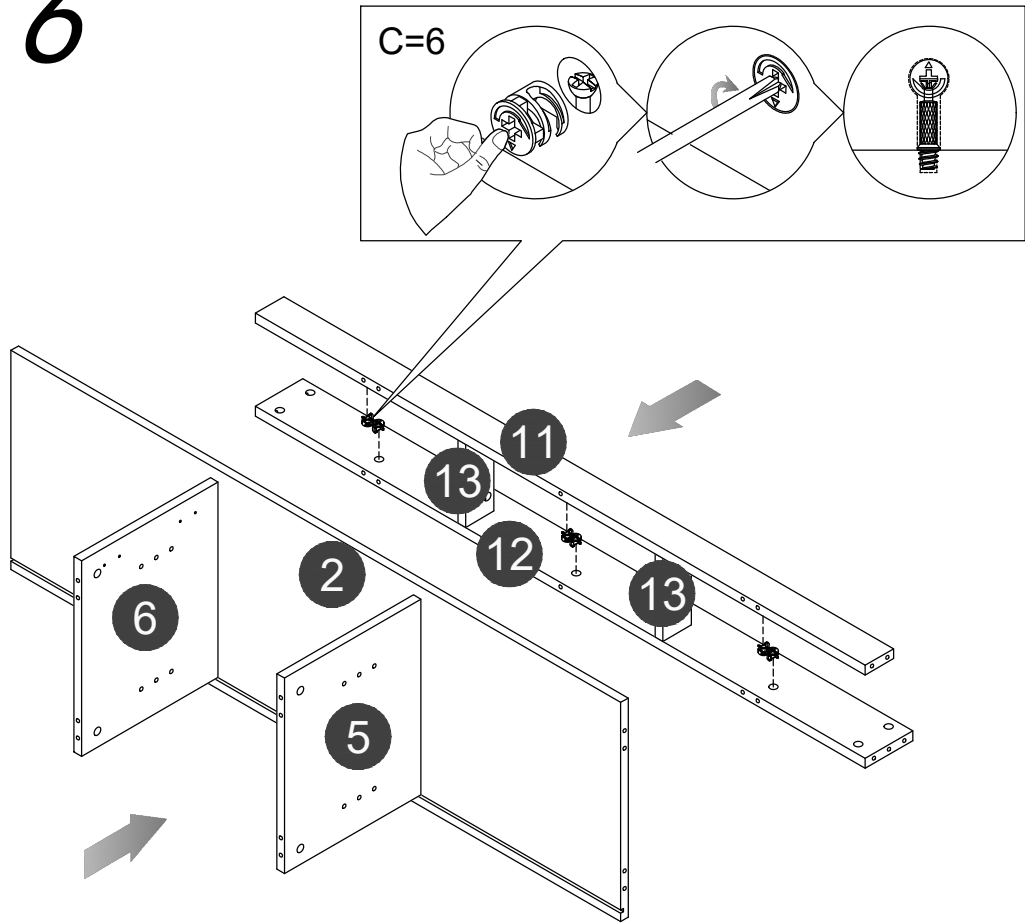


STEP 7

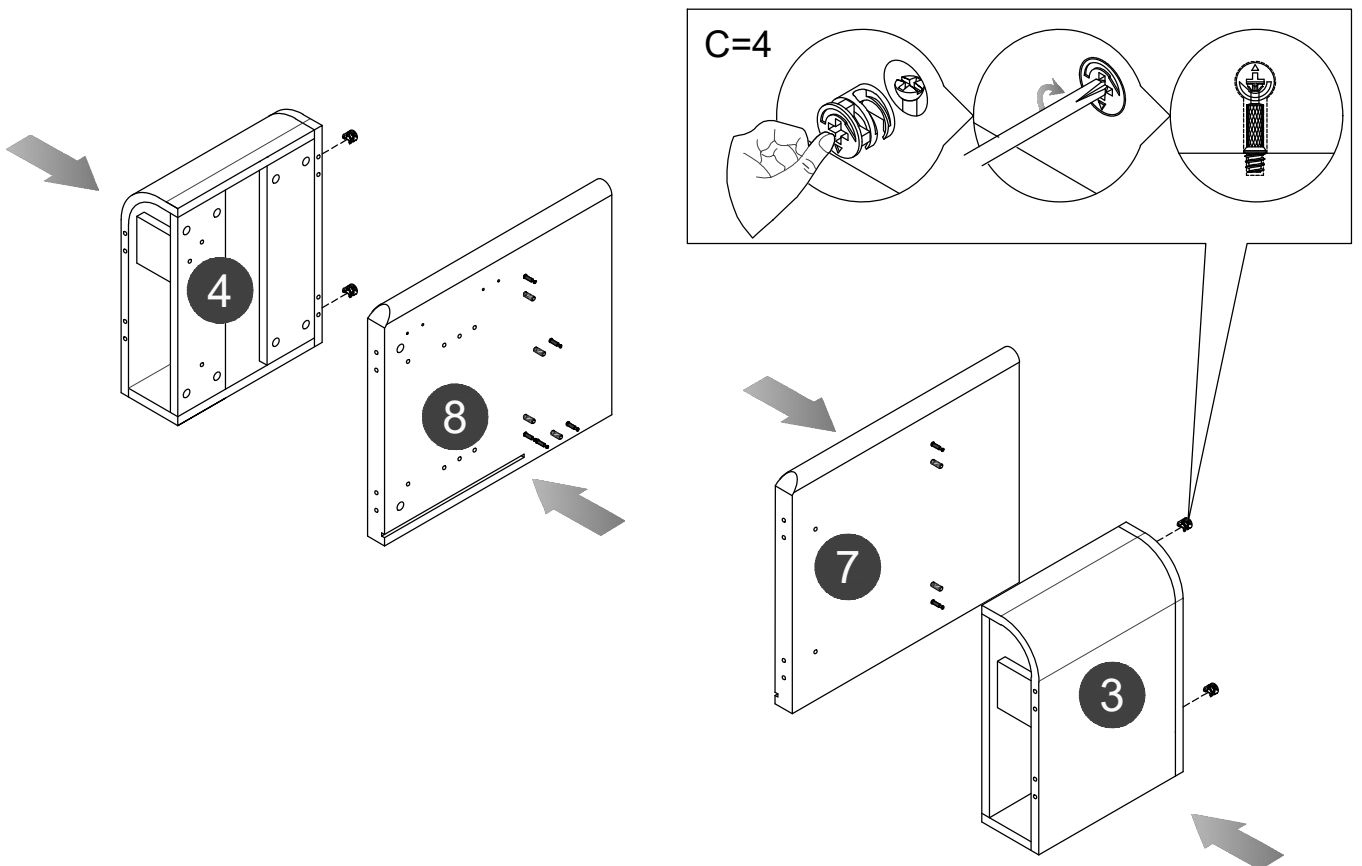


STEP 8

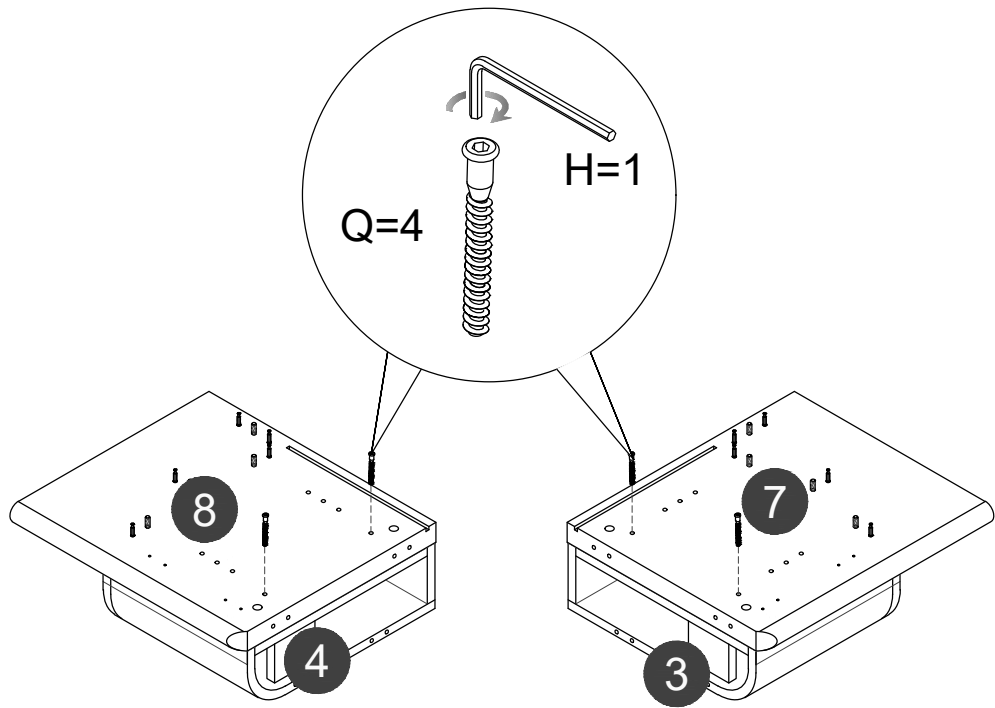


STEP 9

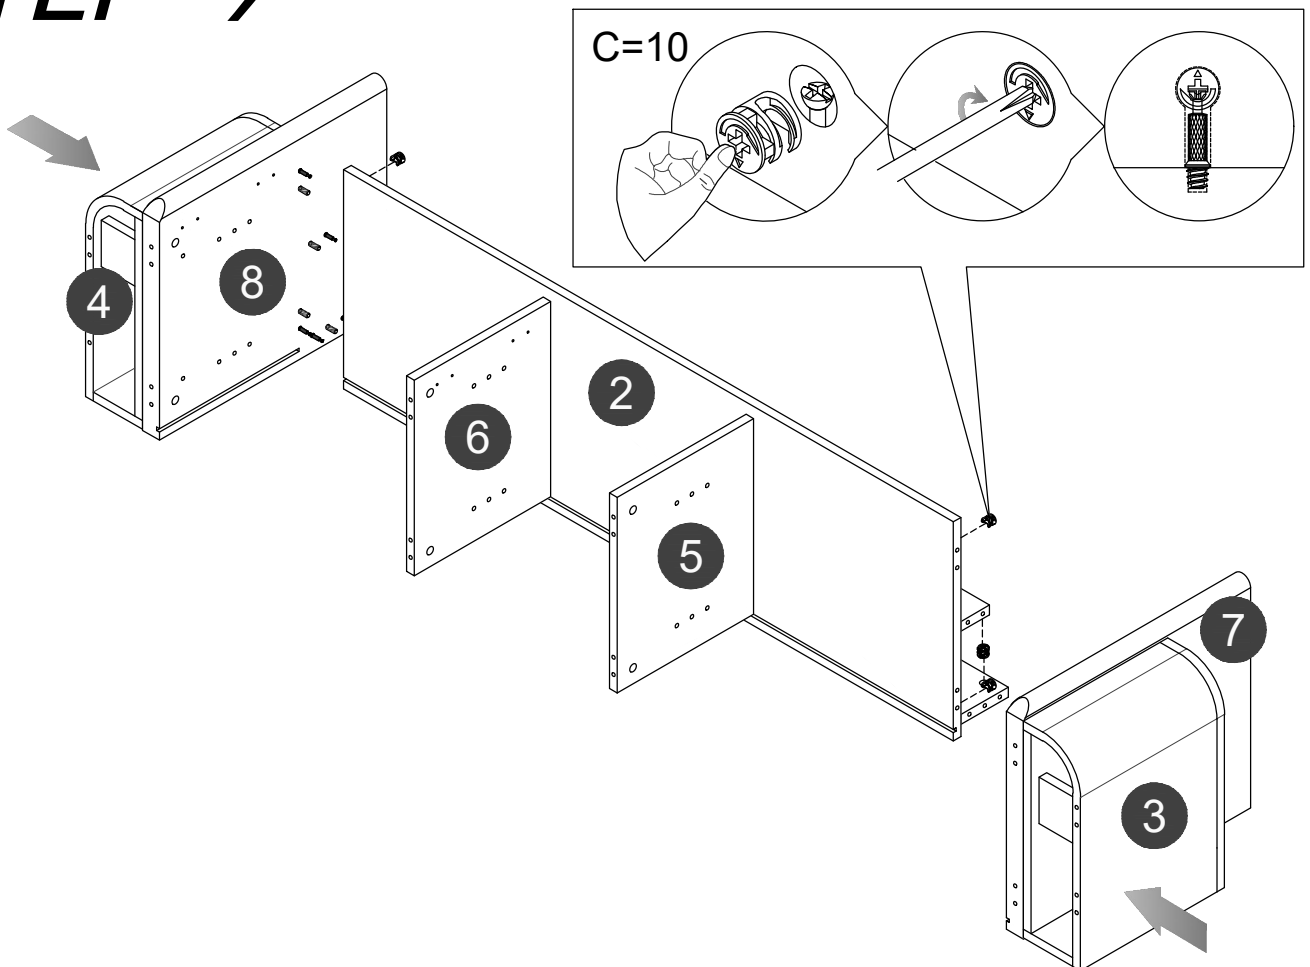


STEP 10

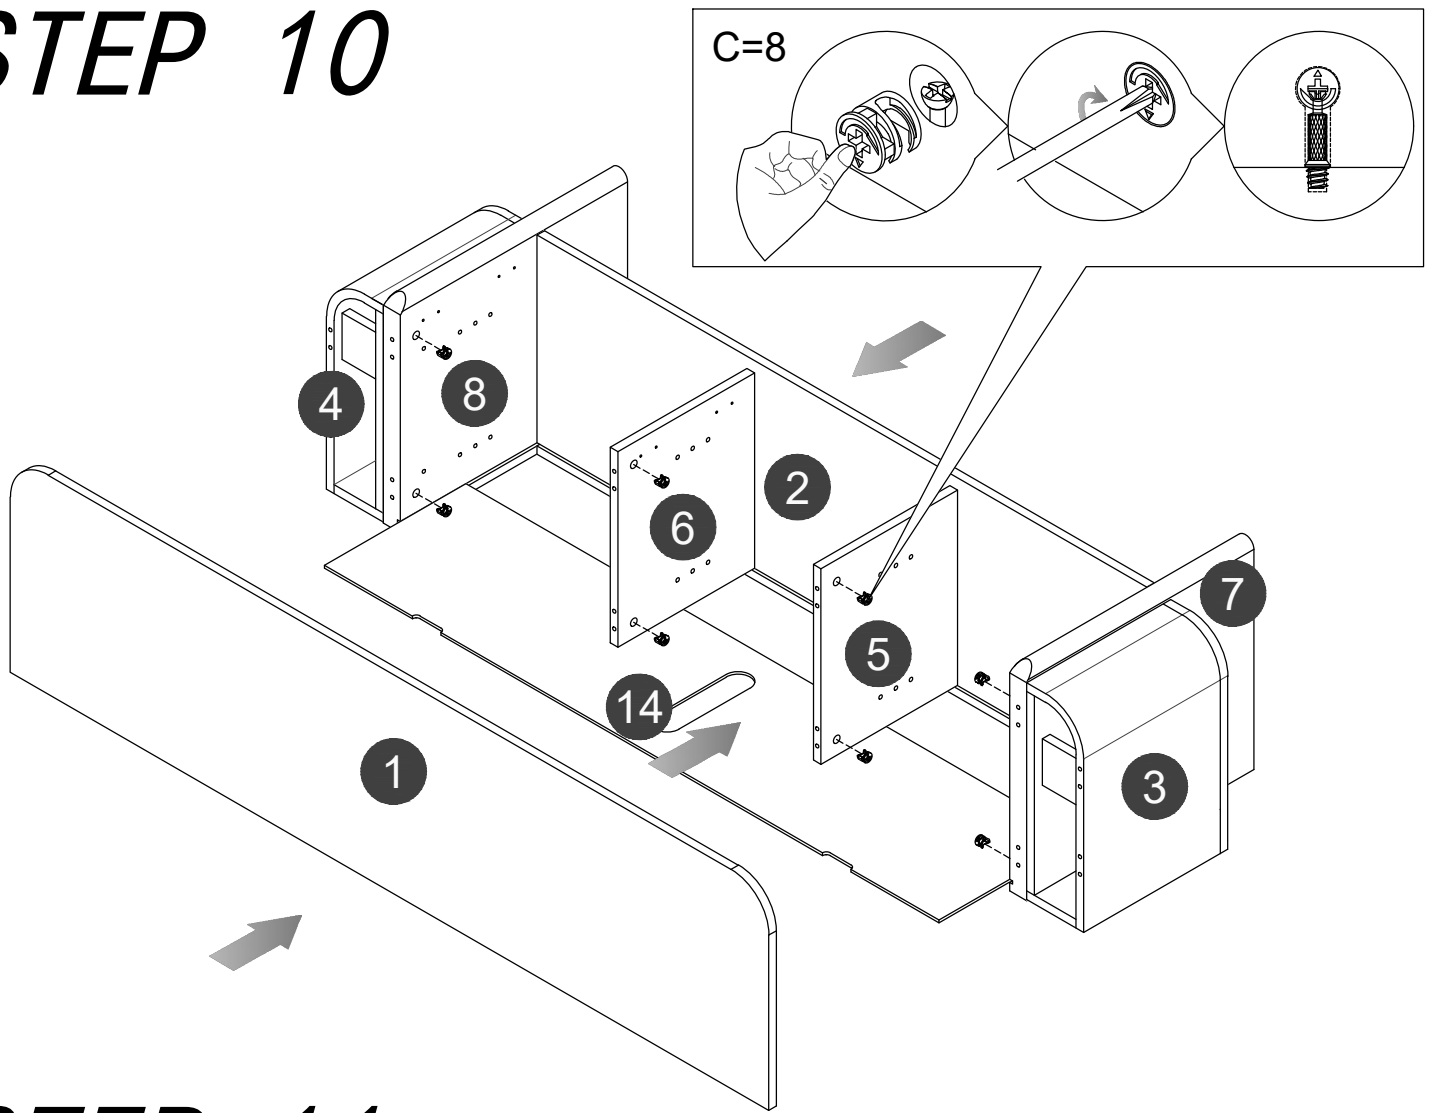


STEP 11

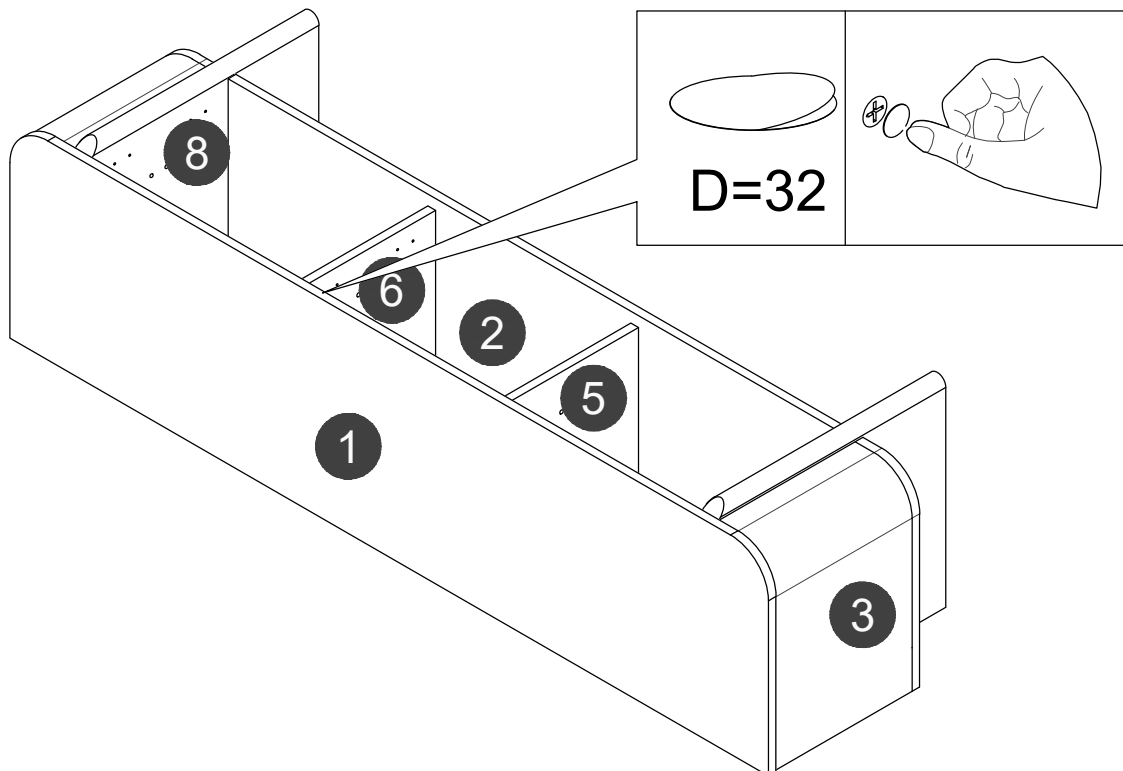


STEP 12

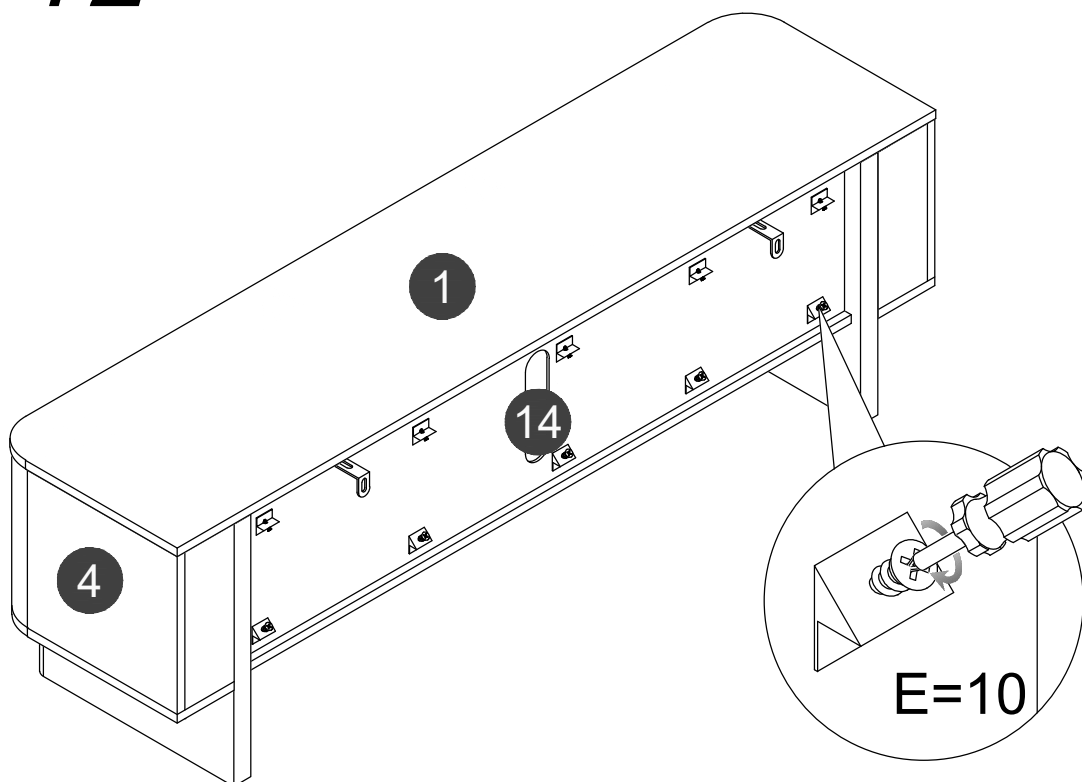


STEP 13

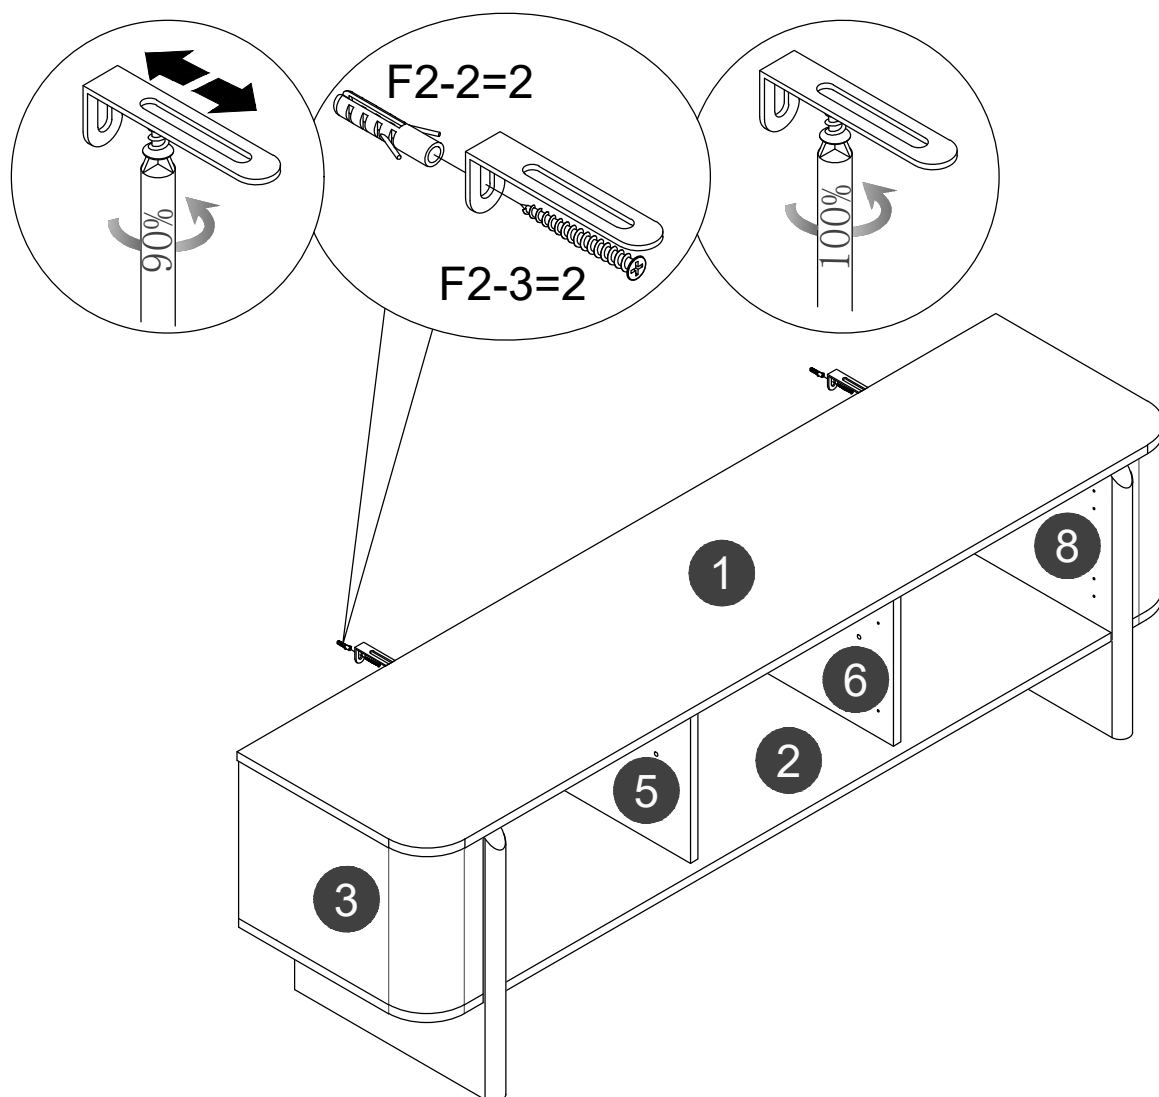


STEP 14

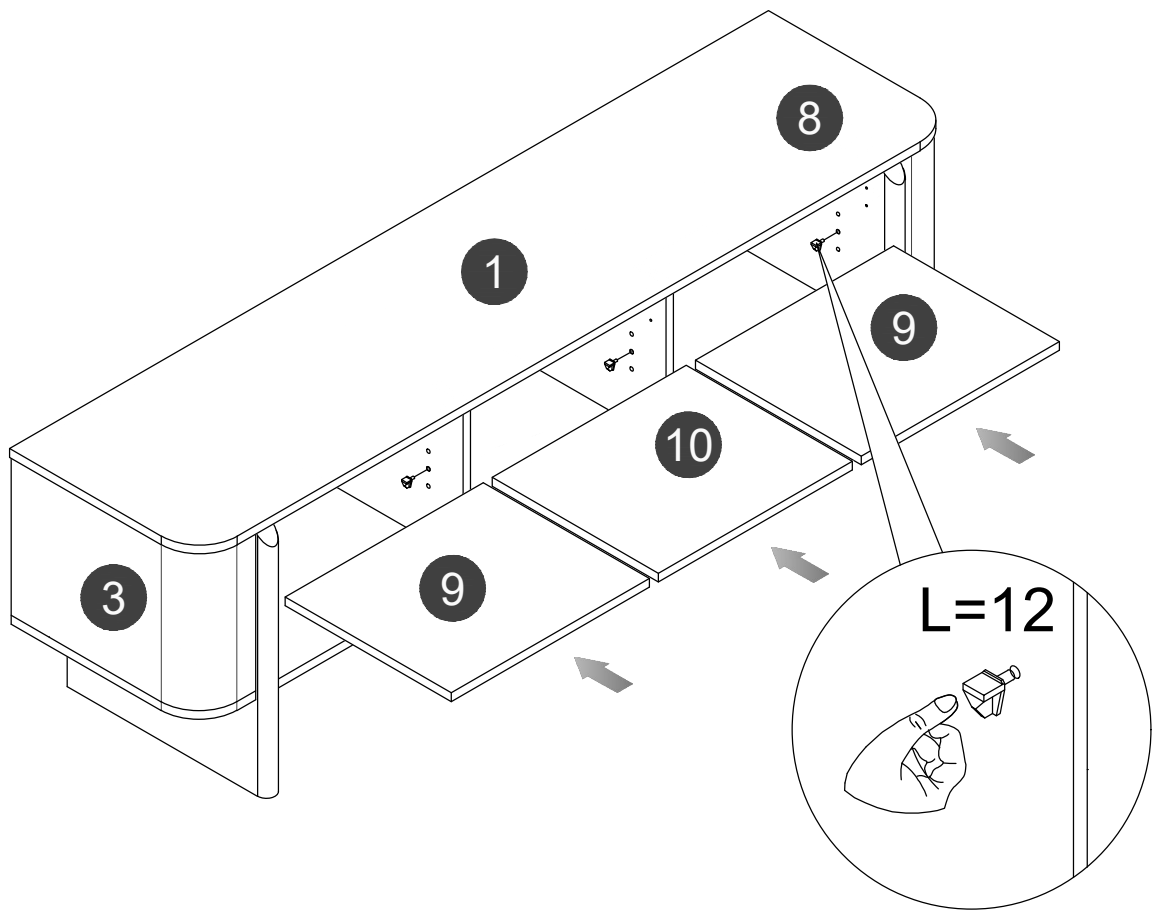





STEP 15

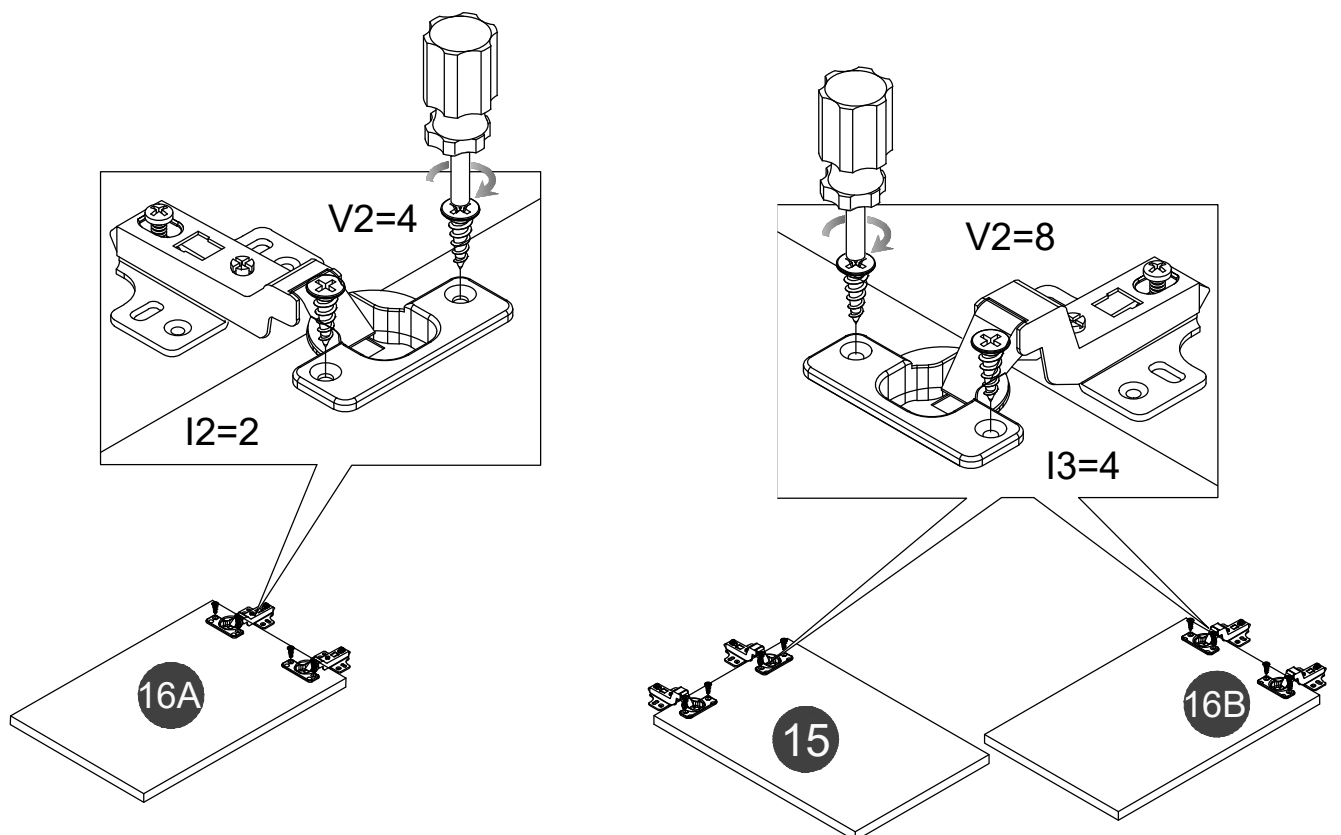


STEP 16

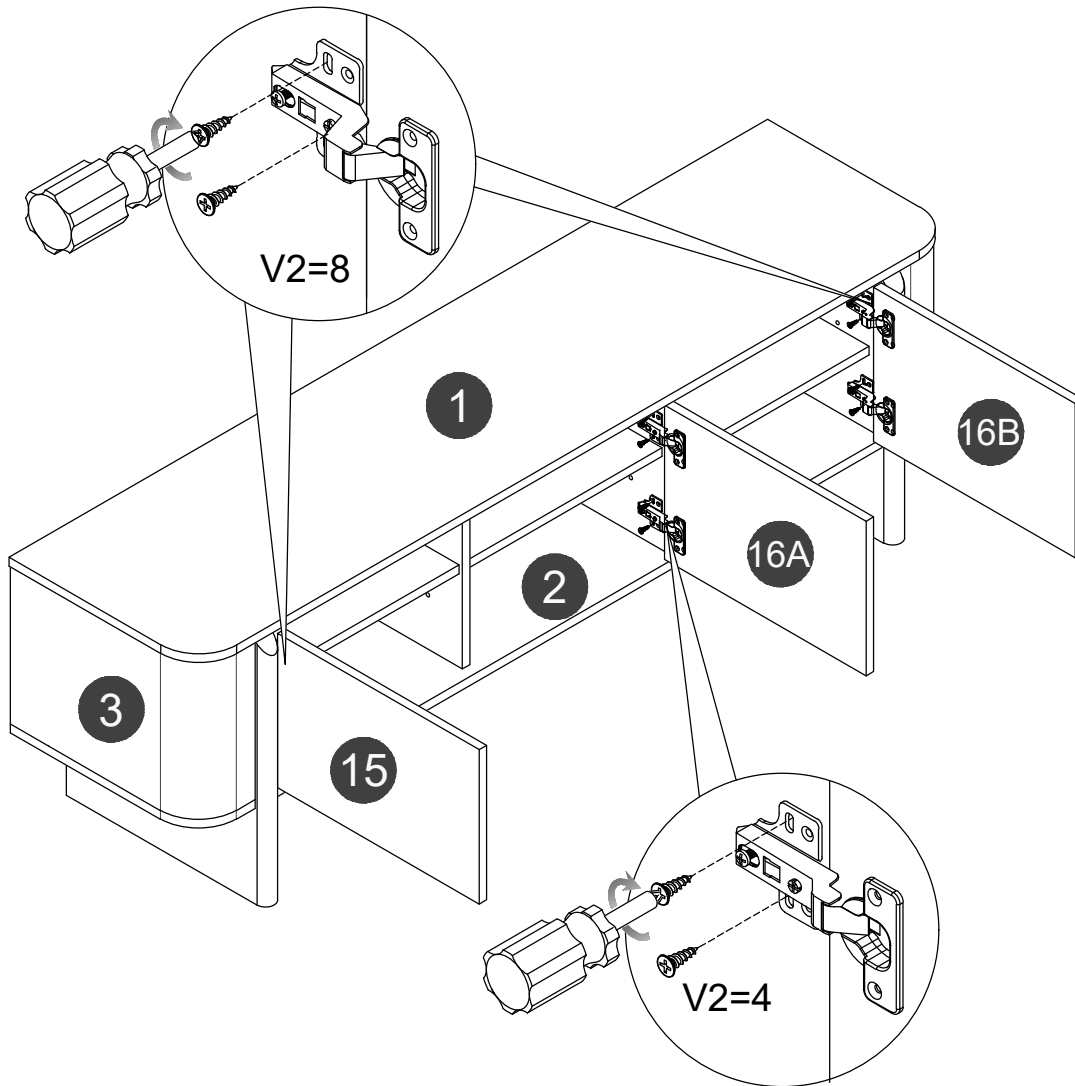

STEP 17

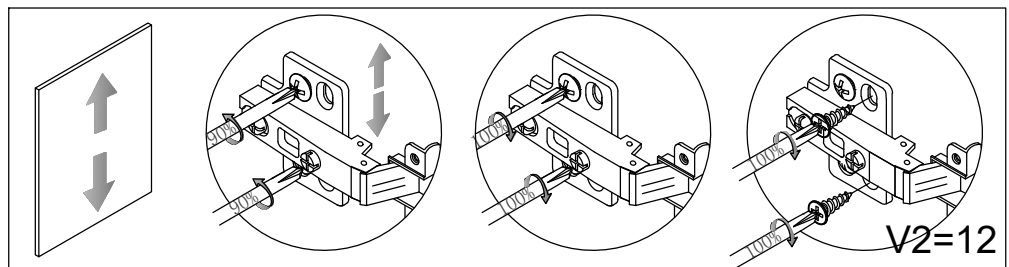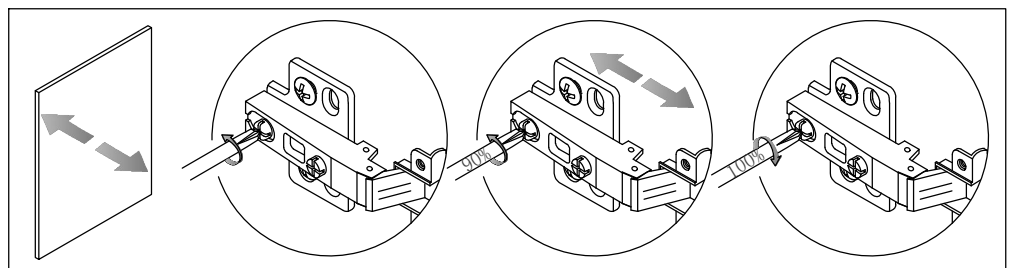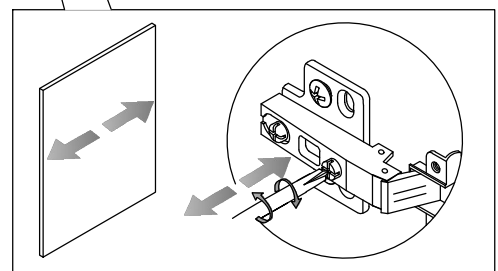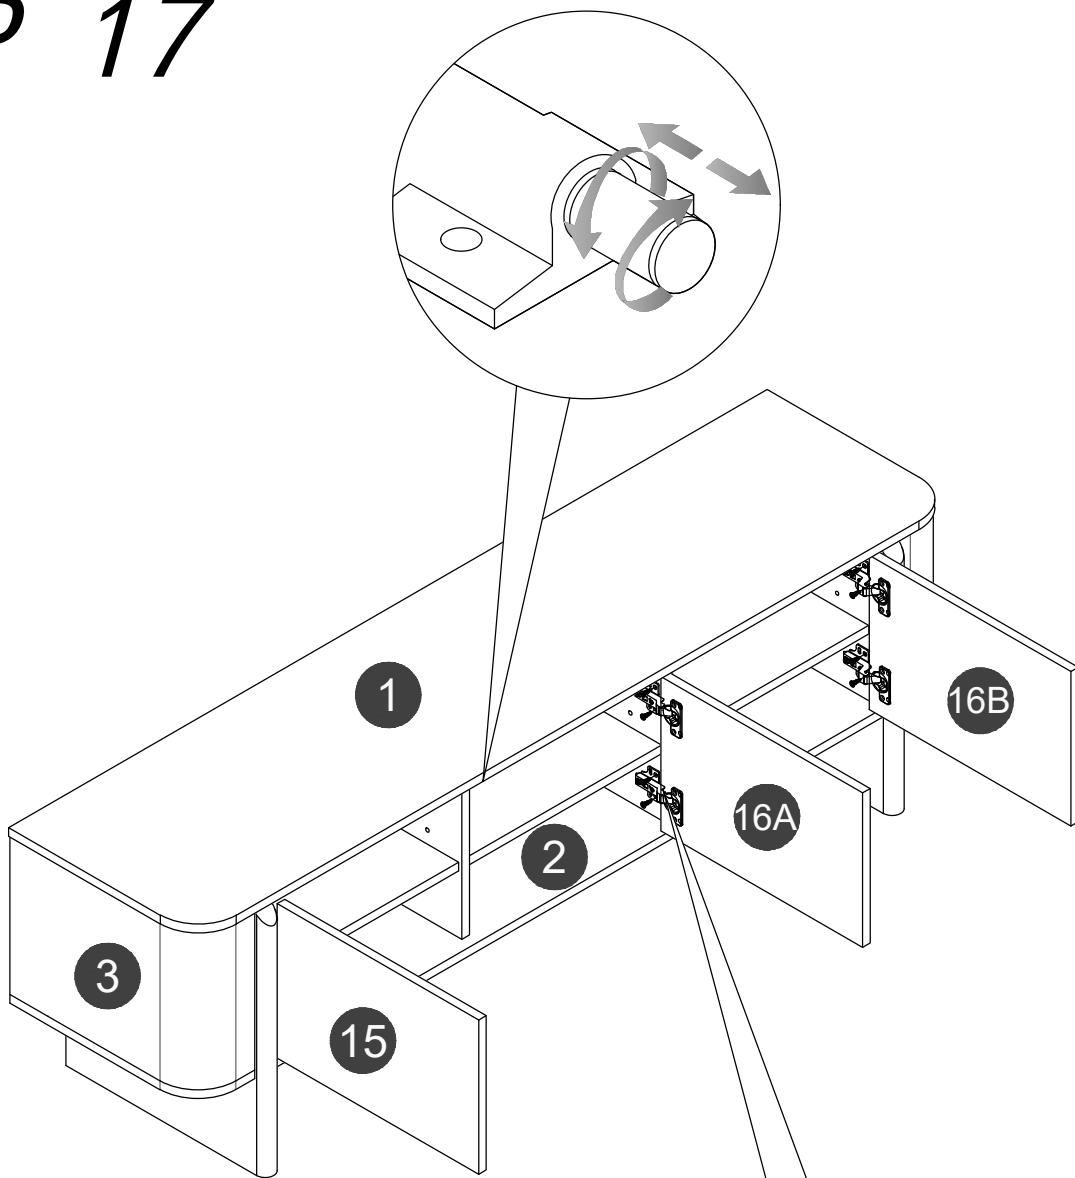

STEP 18

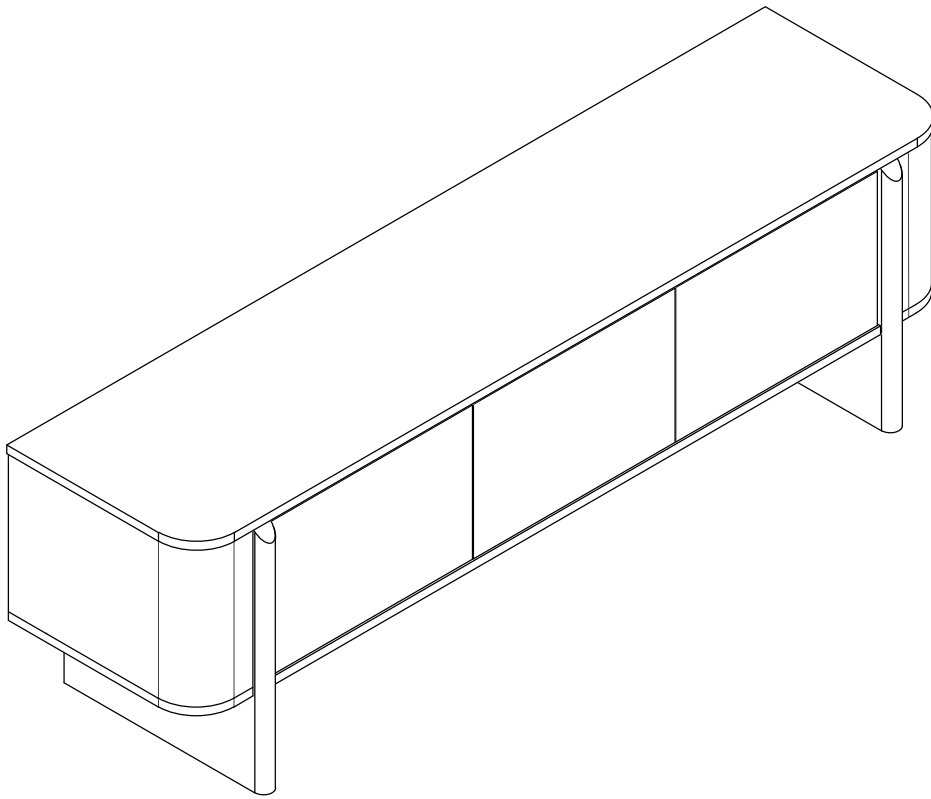

Finish