

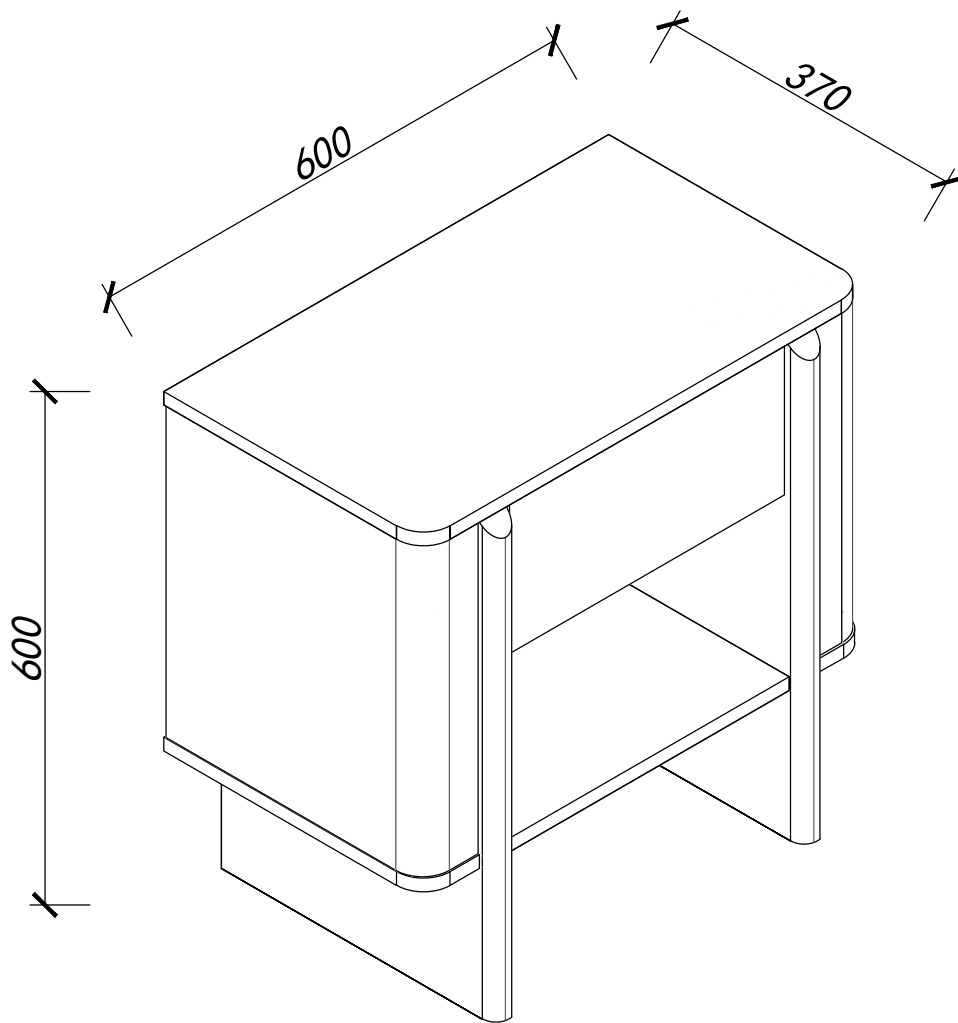
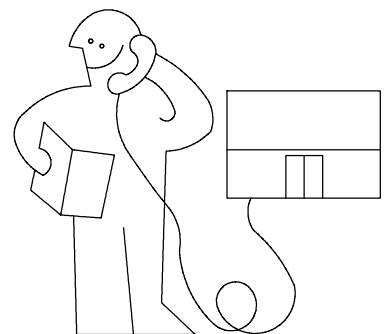
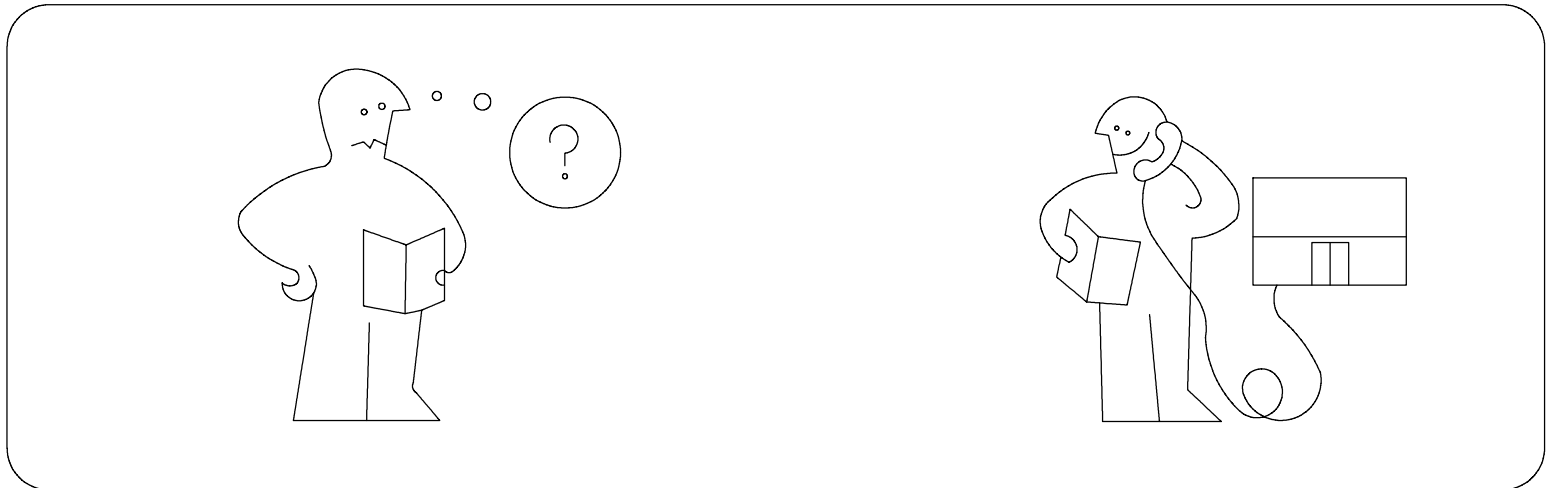
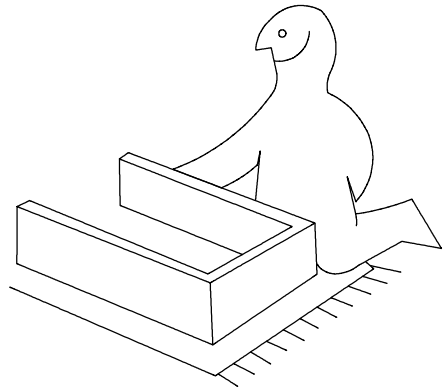
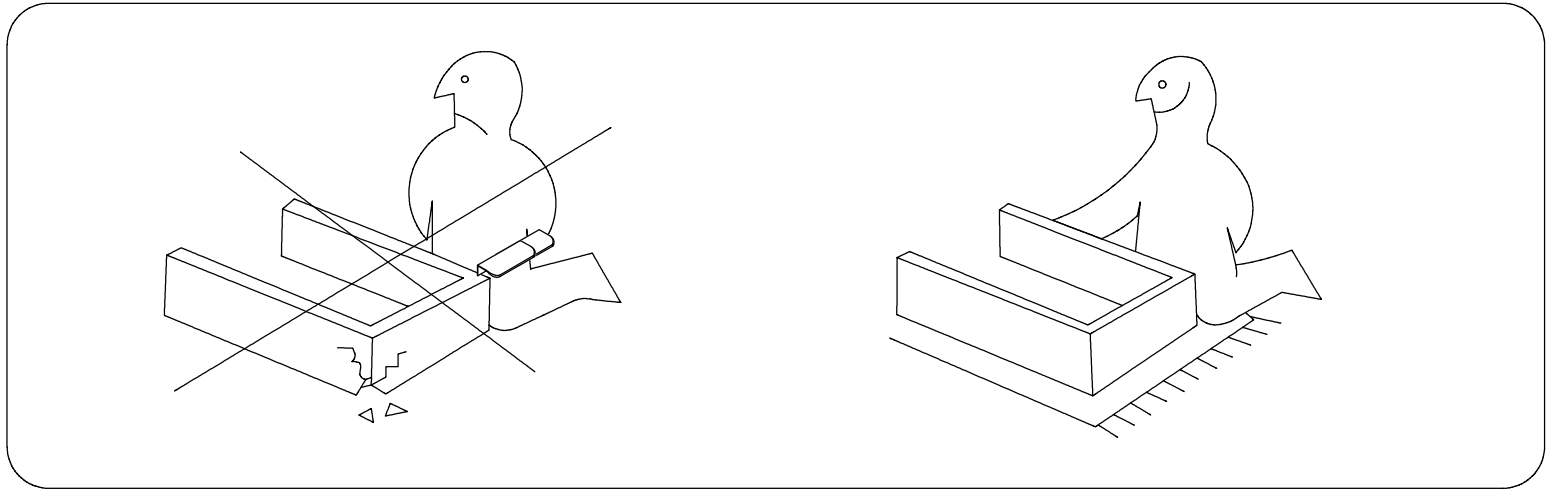
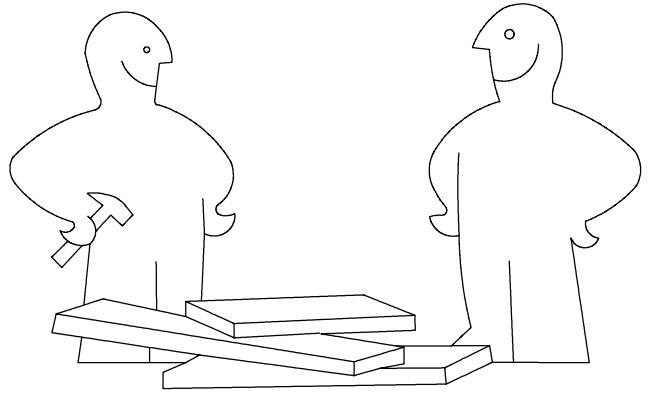
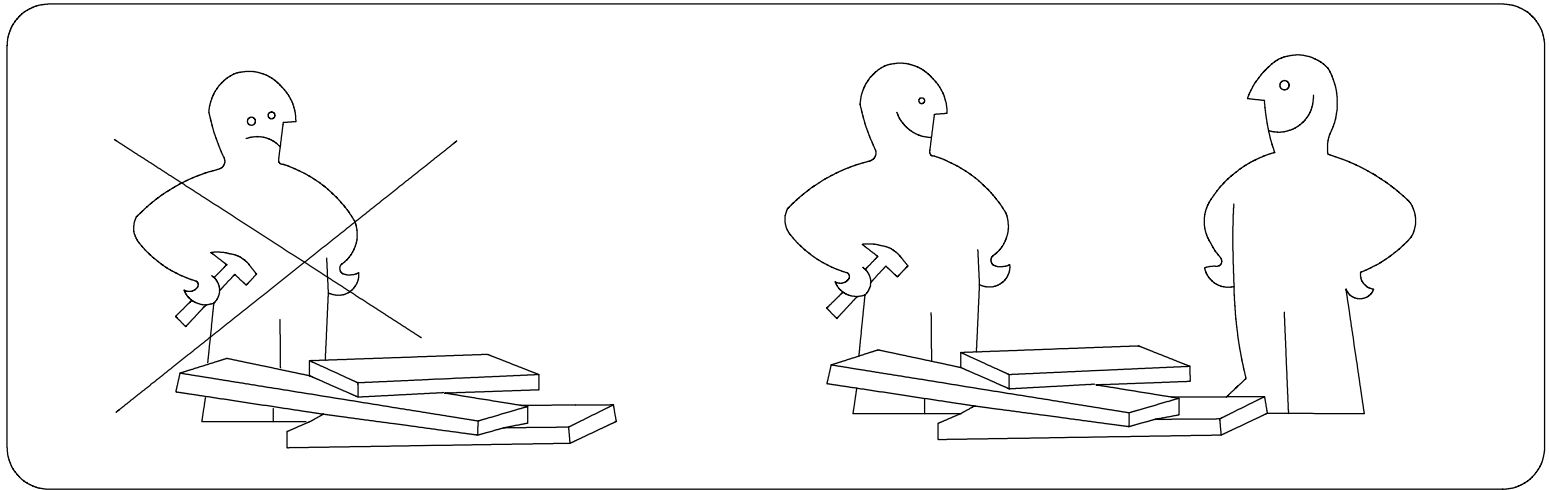


sømcasa


Assembly Instruction

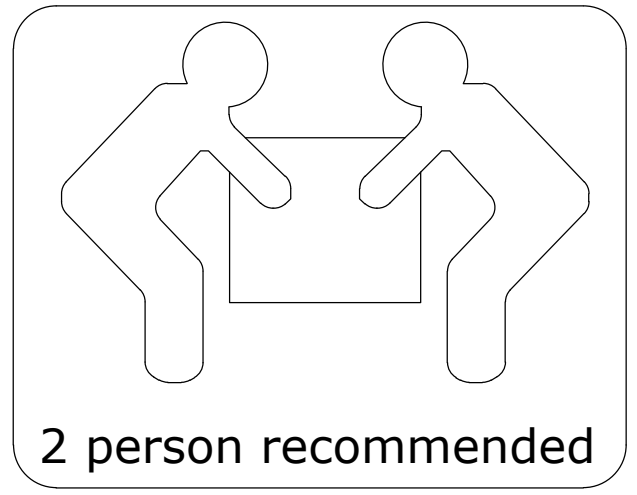

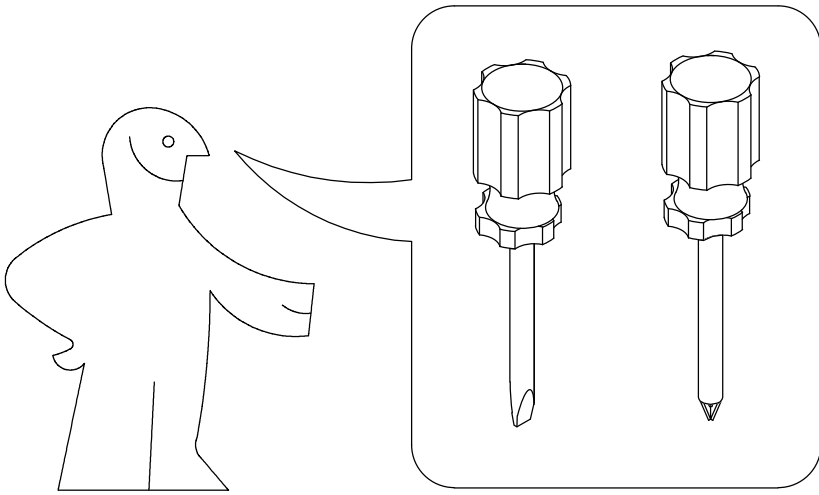


Panel No	Panel Sizes	Quantity
1	600*350*16	1
2	377*350*16	1
3	404*346*75	1
4	404*346*75	1
5	579*370*36	1
6	579*370*36	1
7	377*60*18	1

Panel No	Panel Sizes	Quantity
8	377*100*18	1
9	398*387*5	1
10	371*190*16	1
11	333*150*12	1
12	300*150*12	1
13	300*150*12	1
14	343*298*5	1

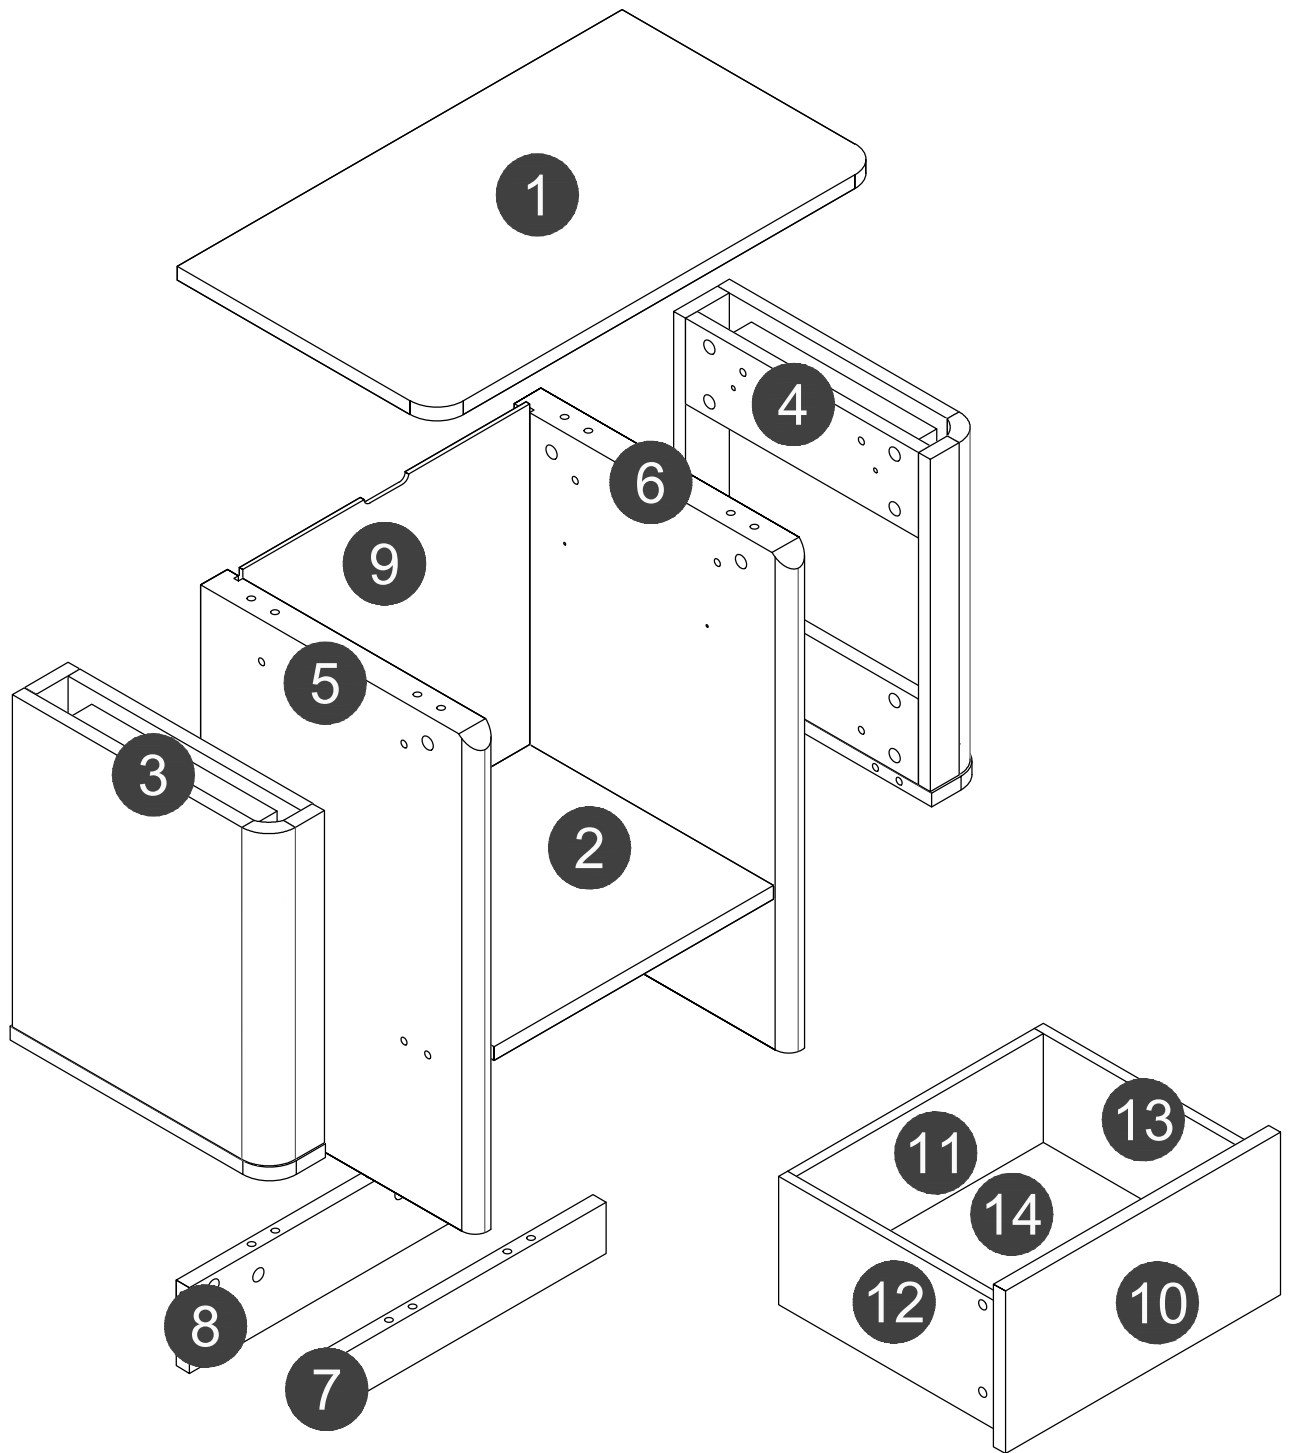


Fittings



M6*40

A1=22




Φ8*40

A2=4



Φ8*30

B=24

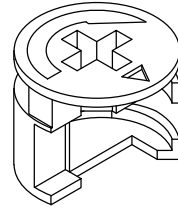


Φ15*12

C=22




Φ21

D=30

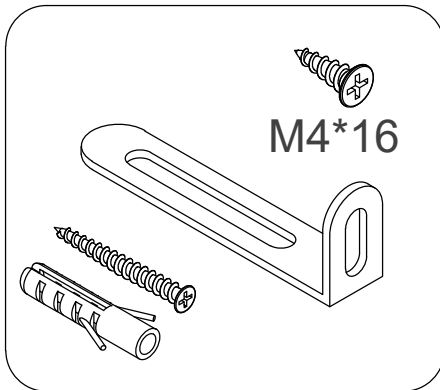


M4*16


F2=1

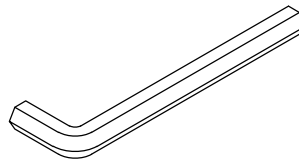

H = 1

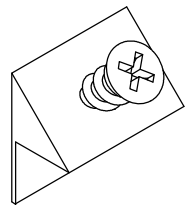


E=4




M3.5*12

V1=8

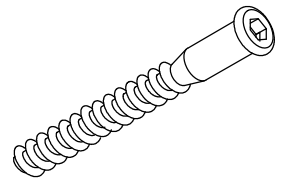

Q=4

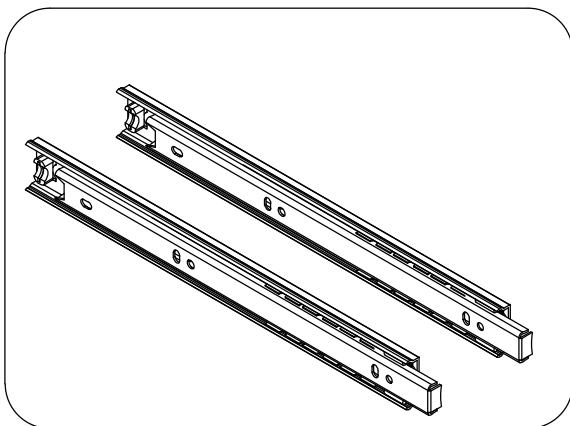

N=1




P=8




O=8


STEP 1

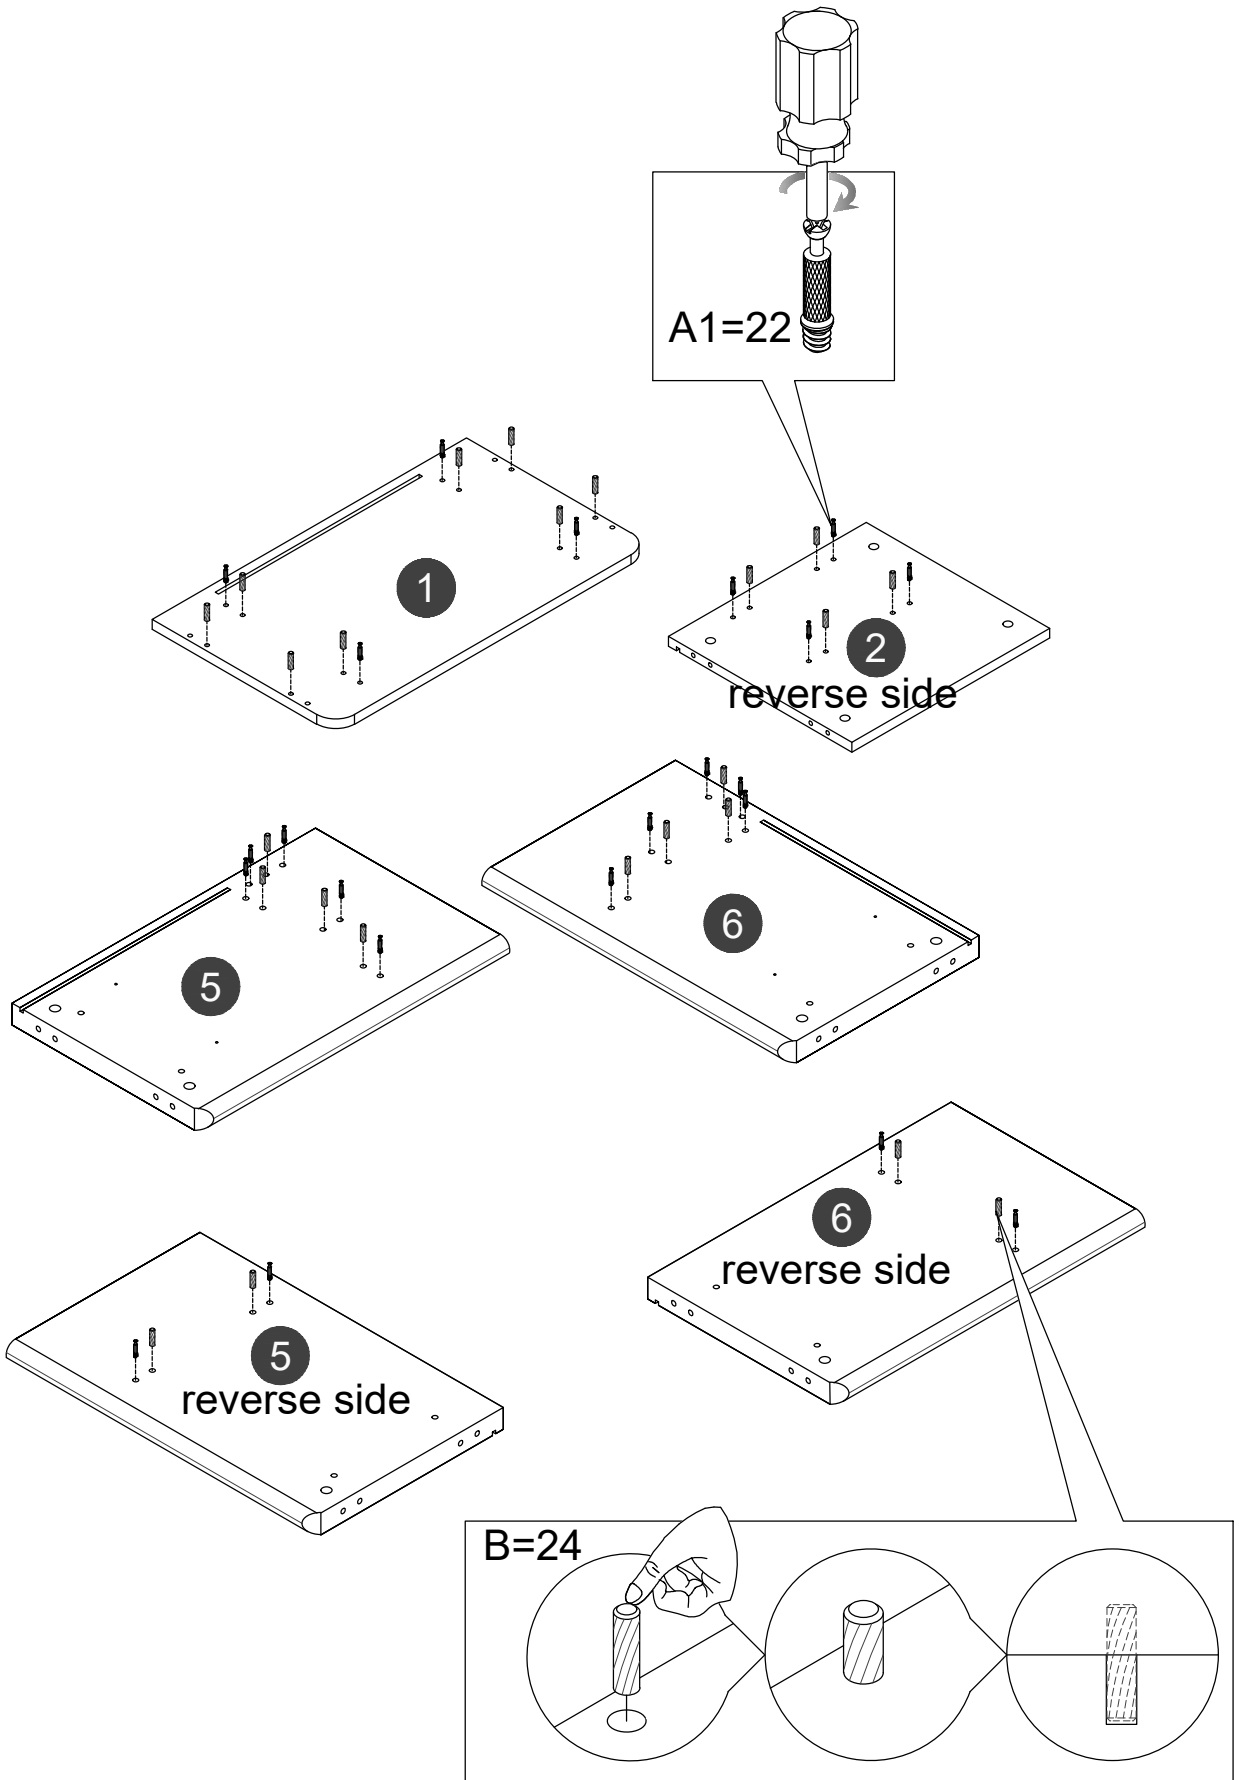







STEP 2

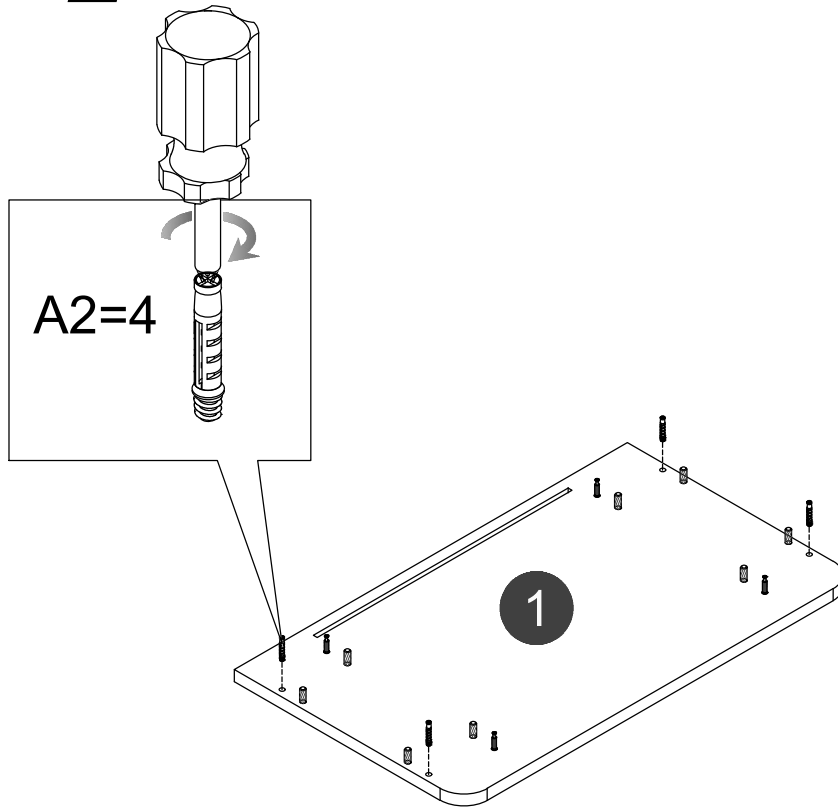


STEP 3

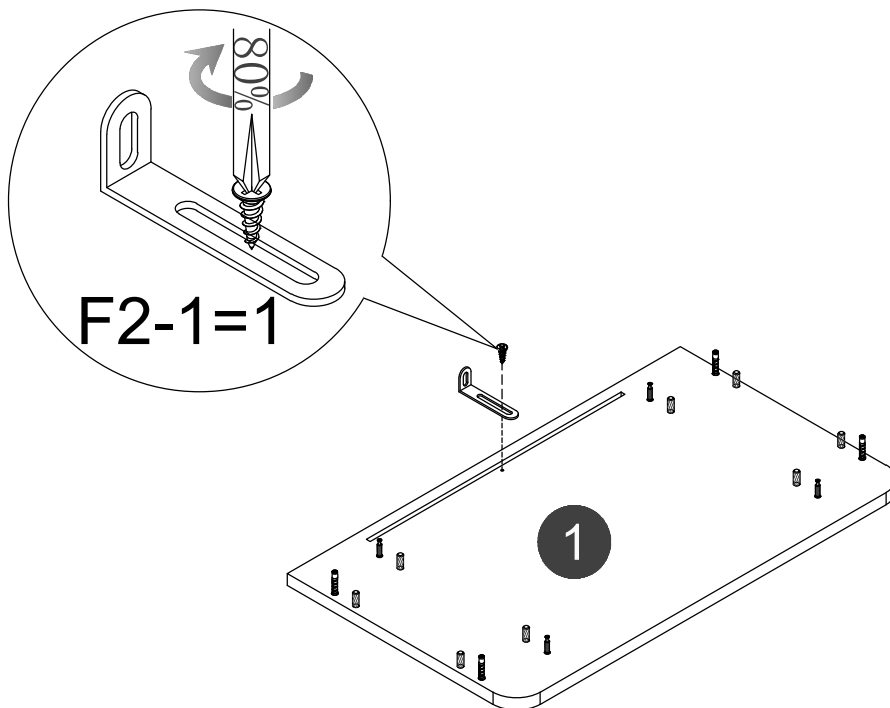


STEP 4

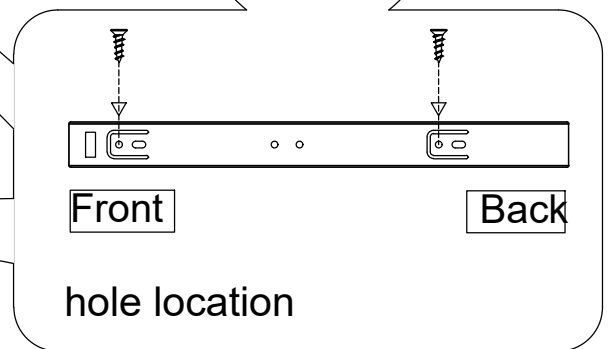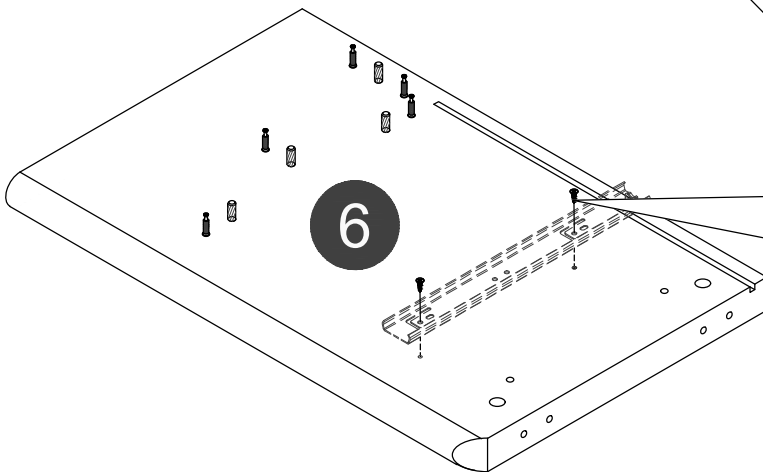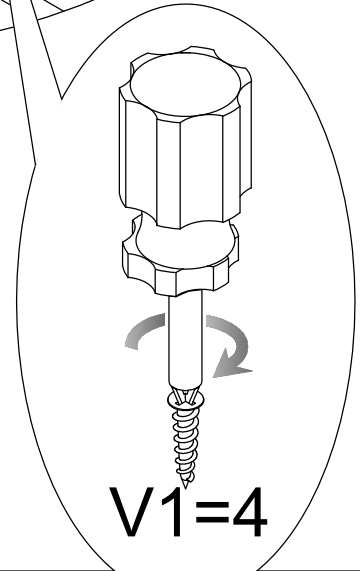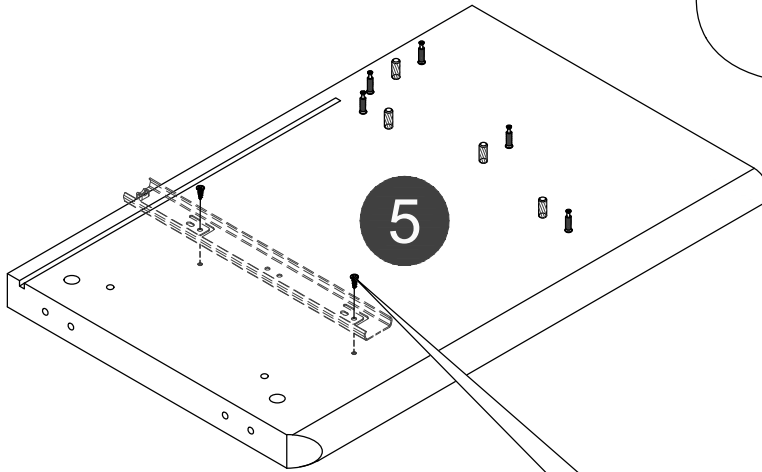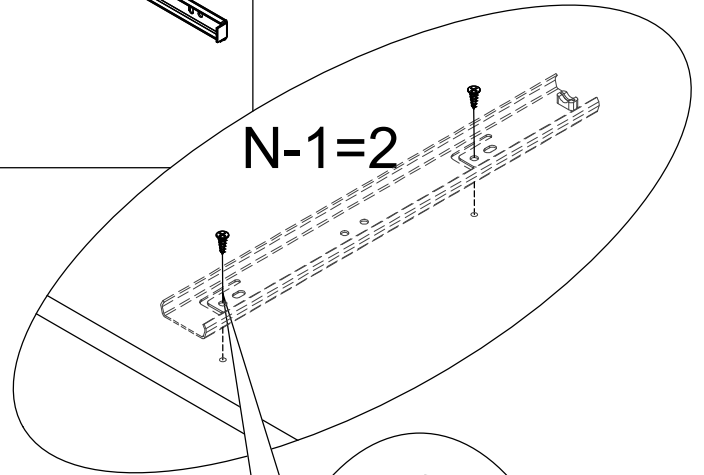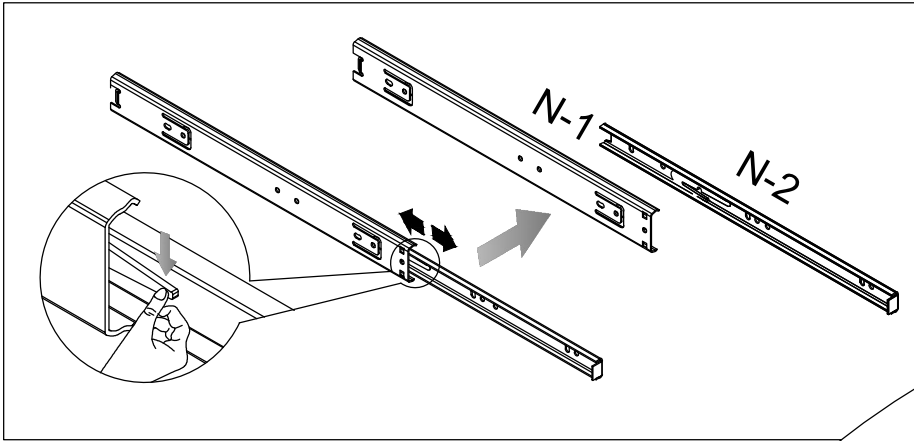


STEP 5

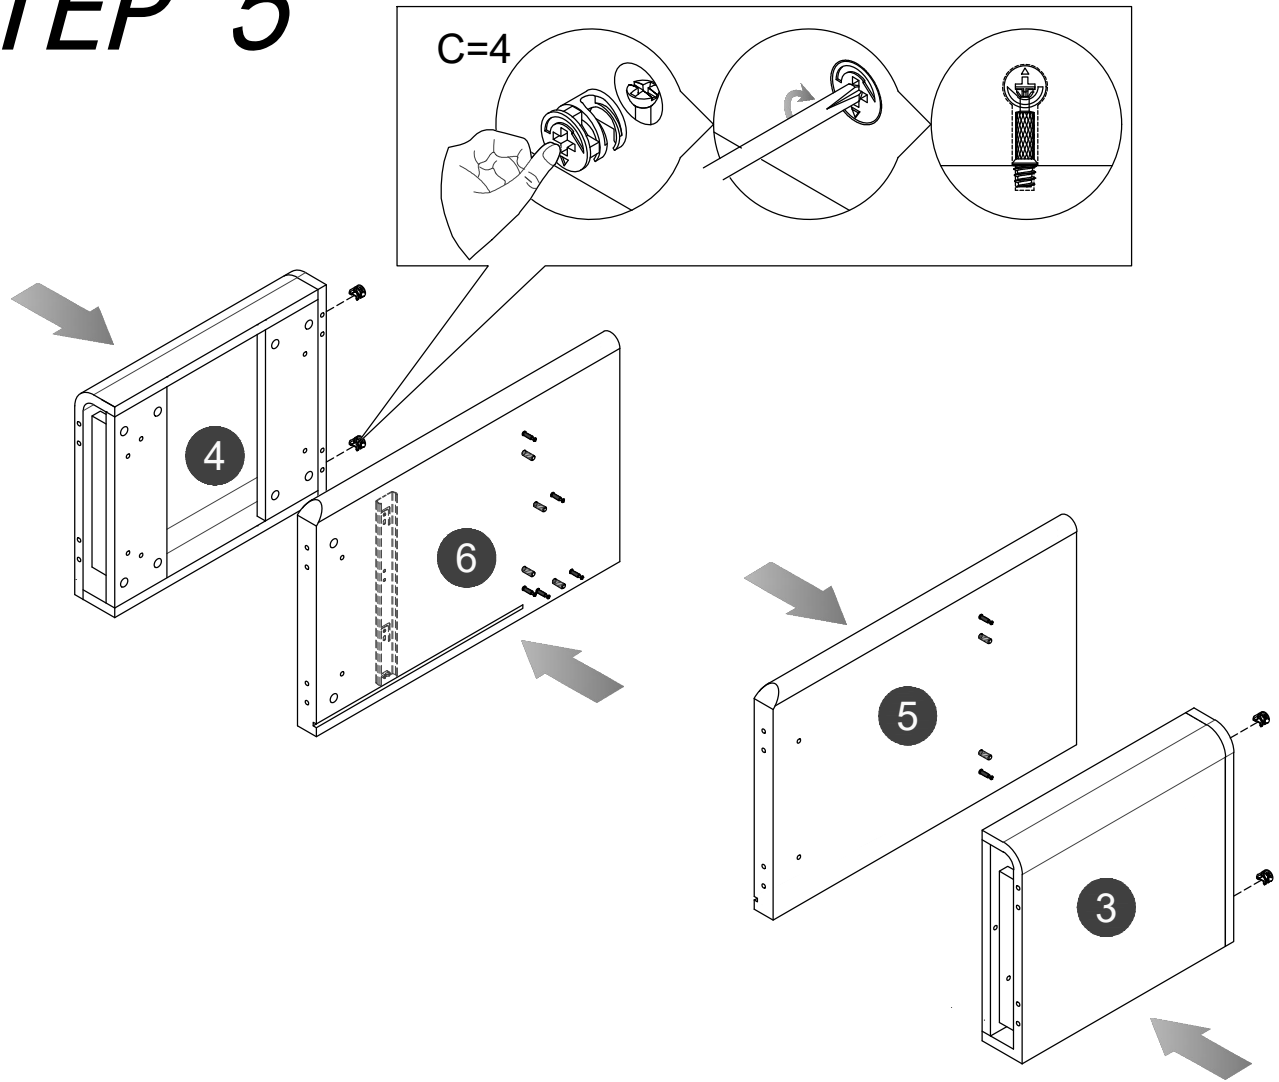


STEP 6

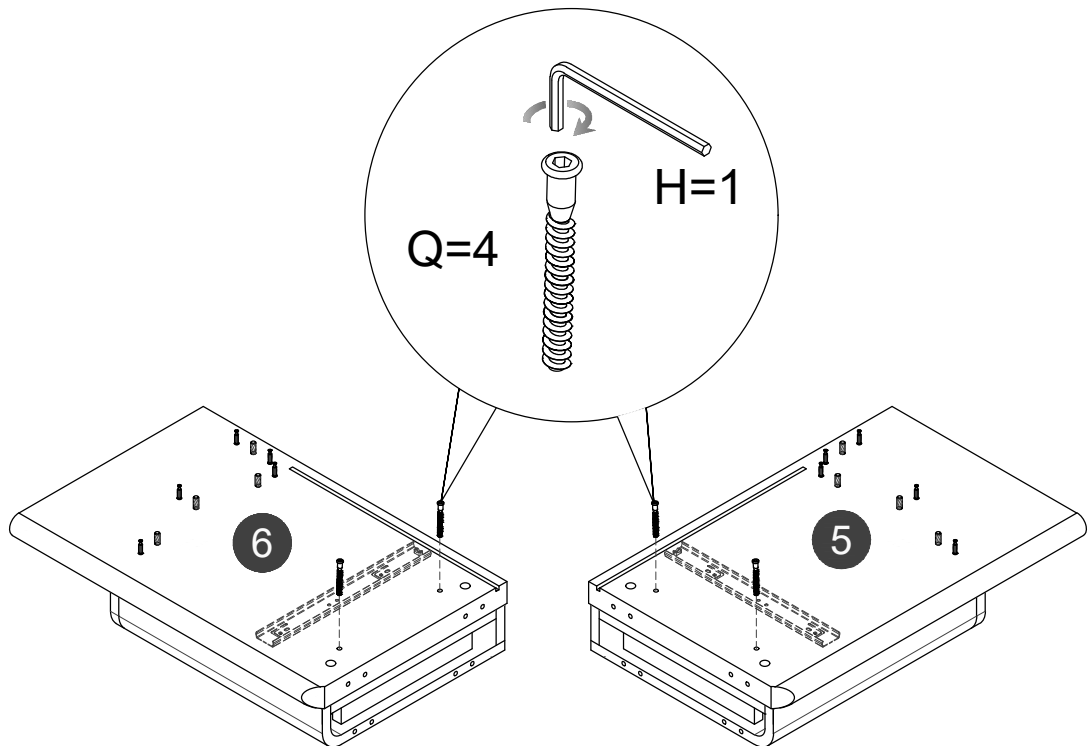


STEP 7

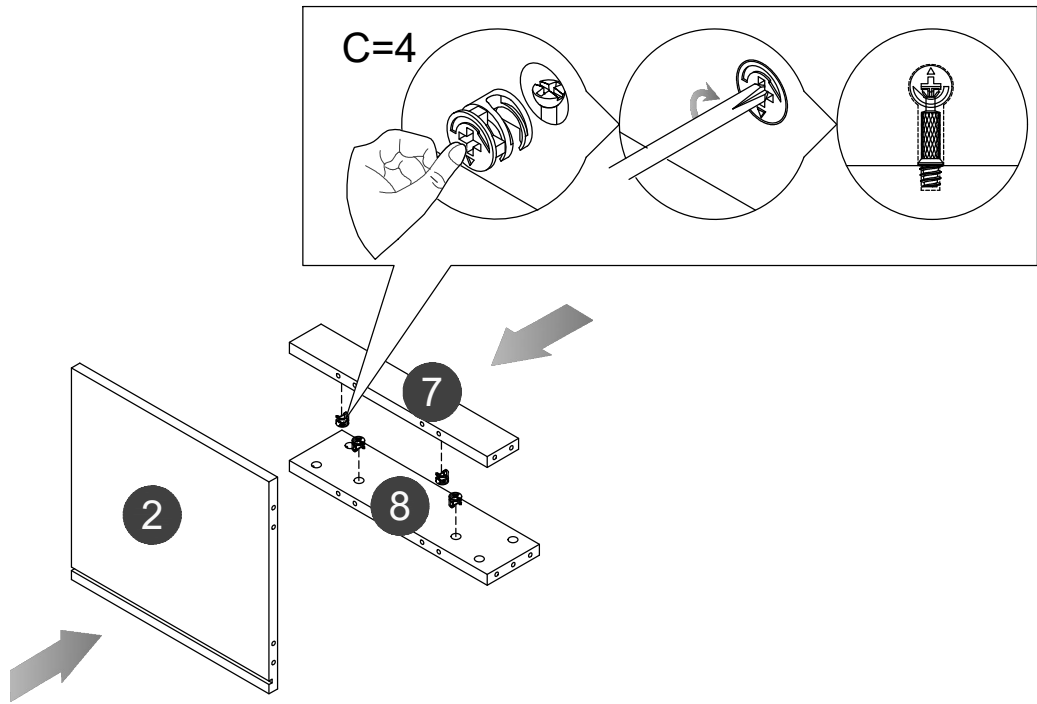


STEP 8

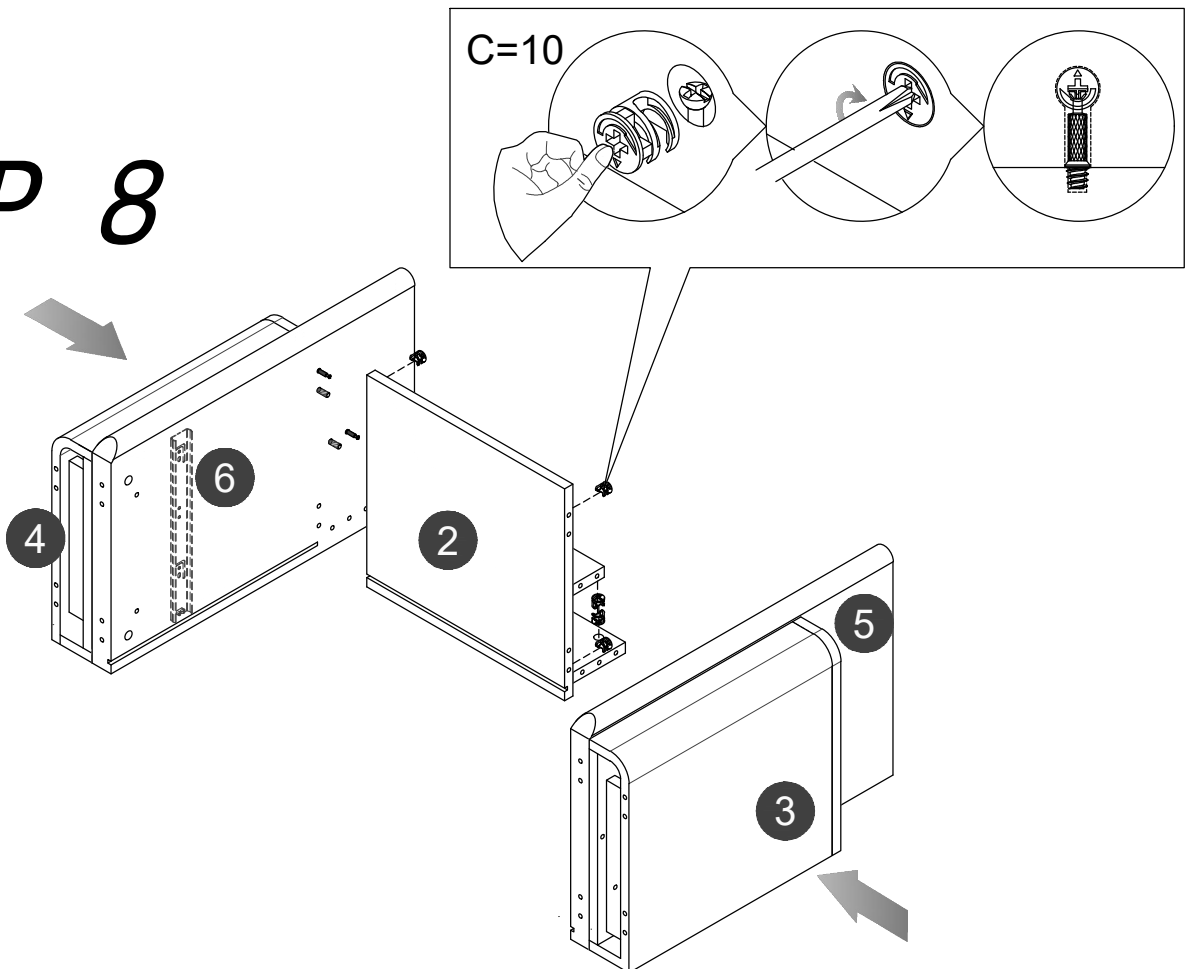


STEP 9

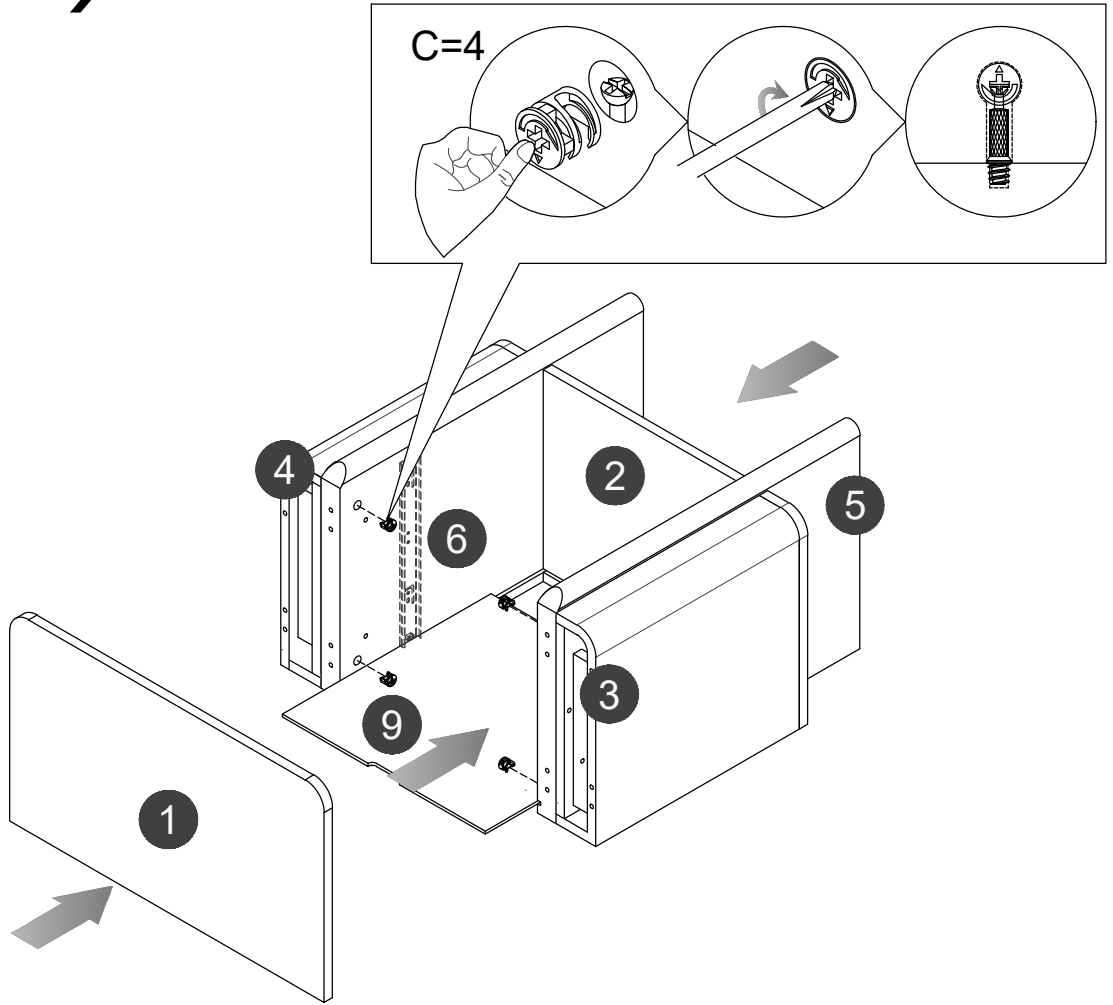


STEP 10

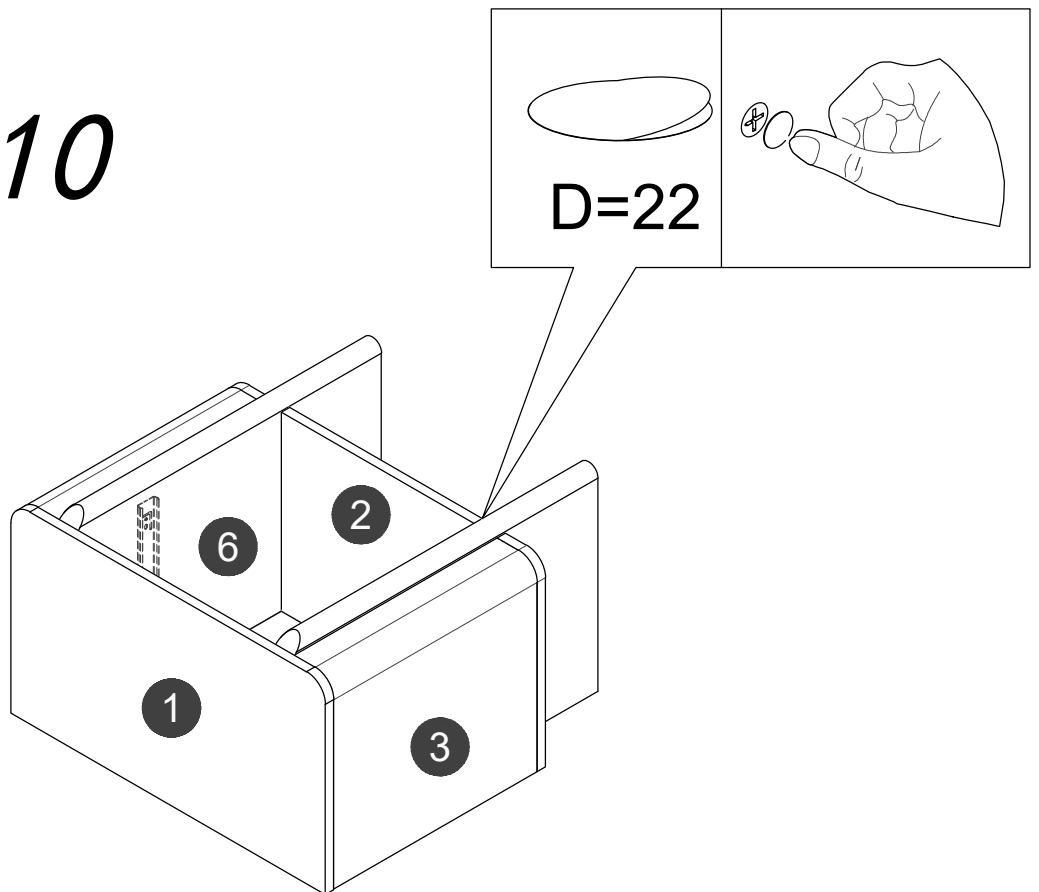


STEP 11

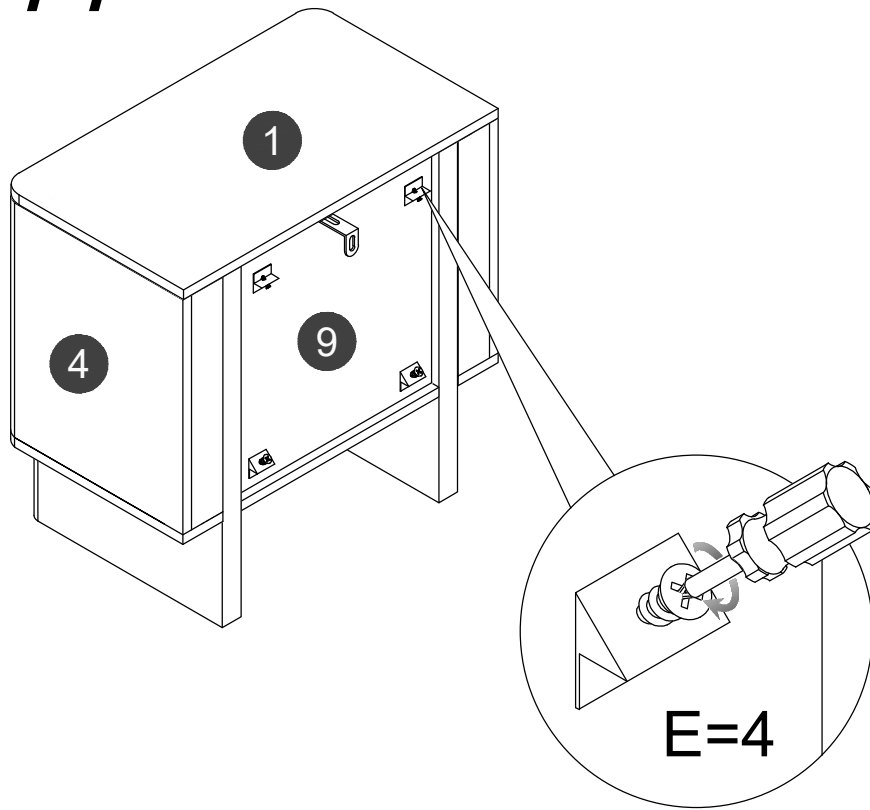


STEP 12

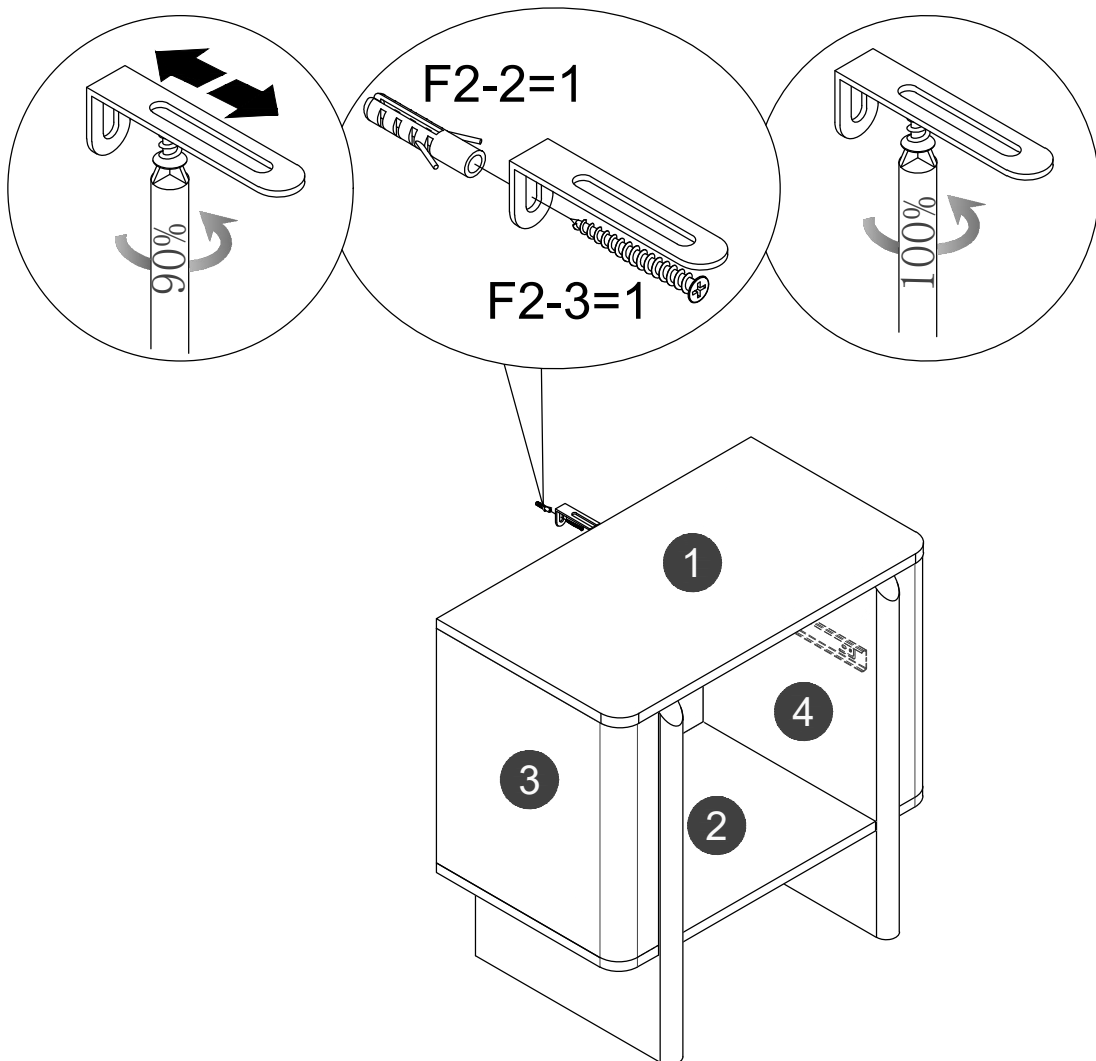


STEP 13

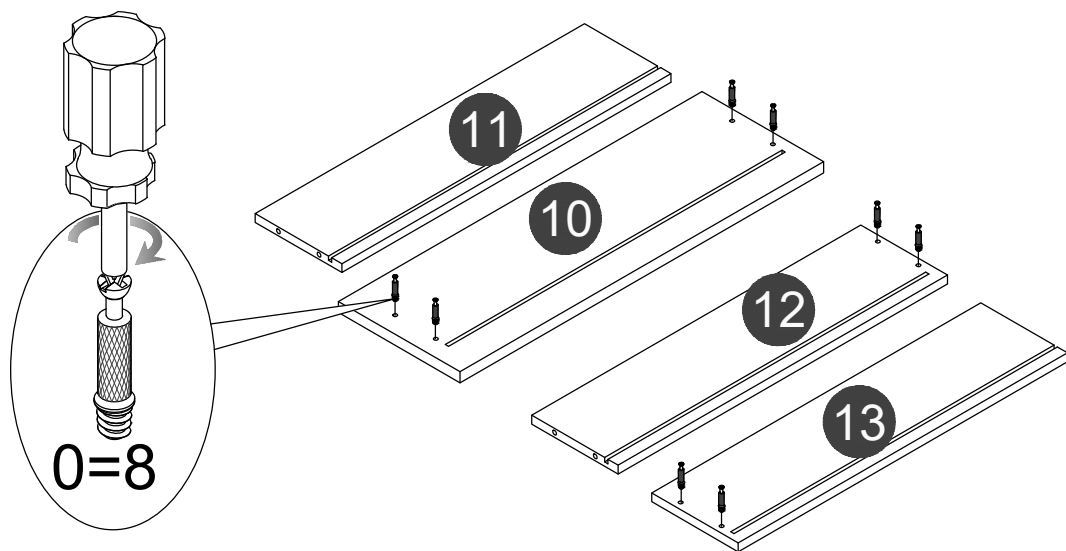


STEP 14

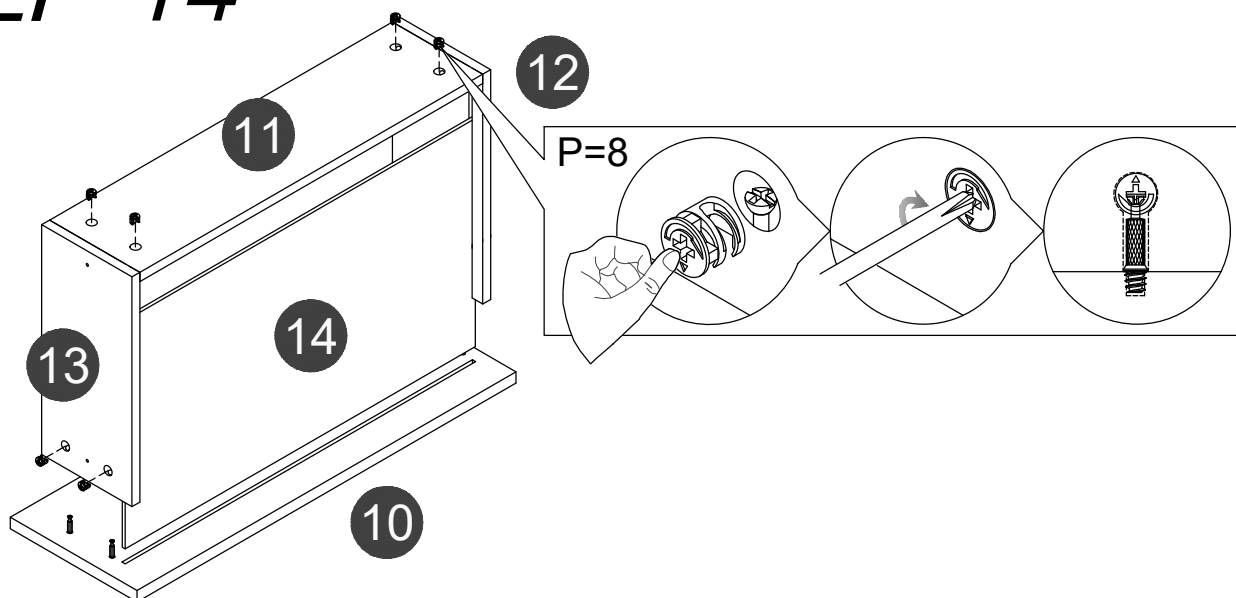


STEP 15

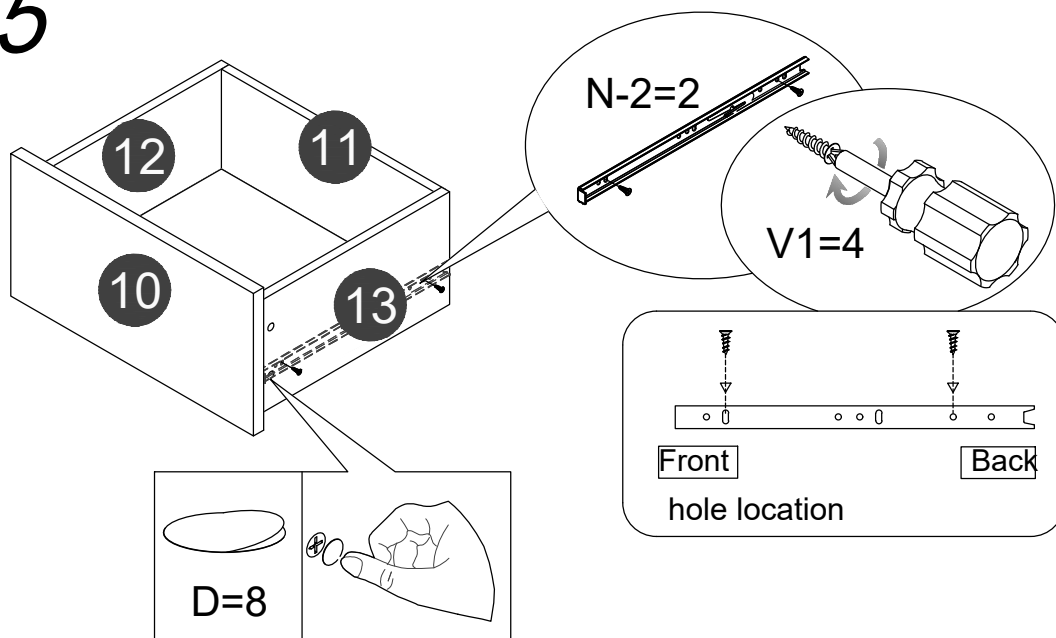


STEP 16

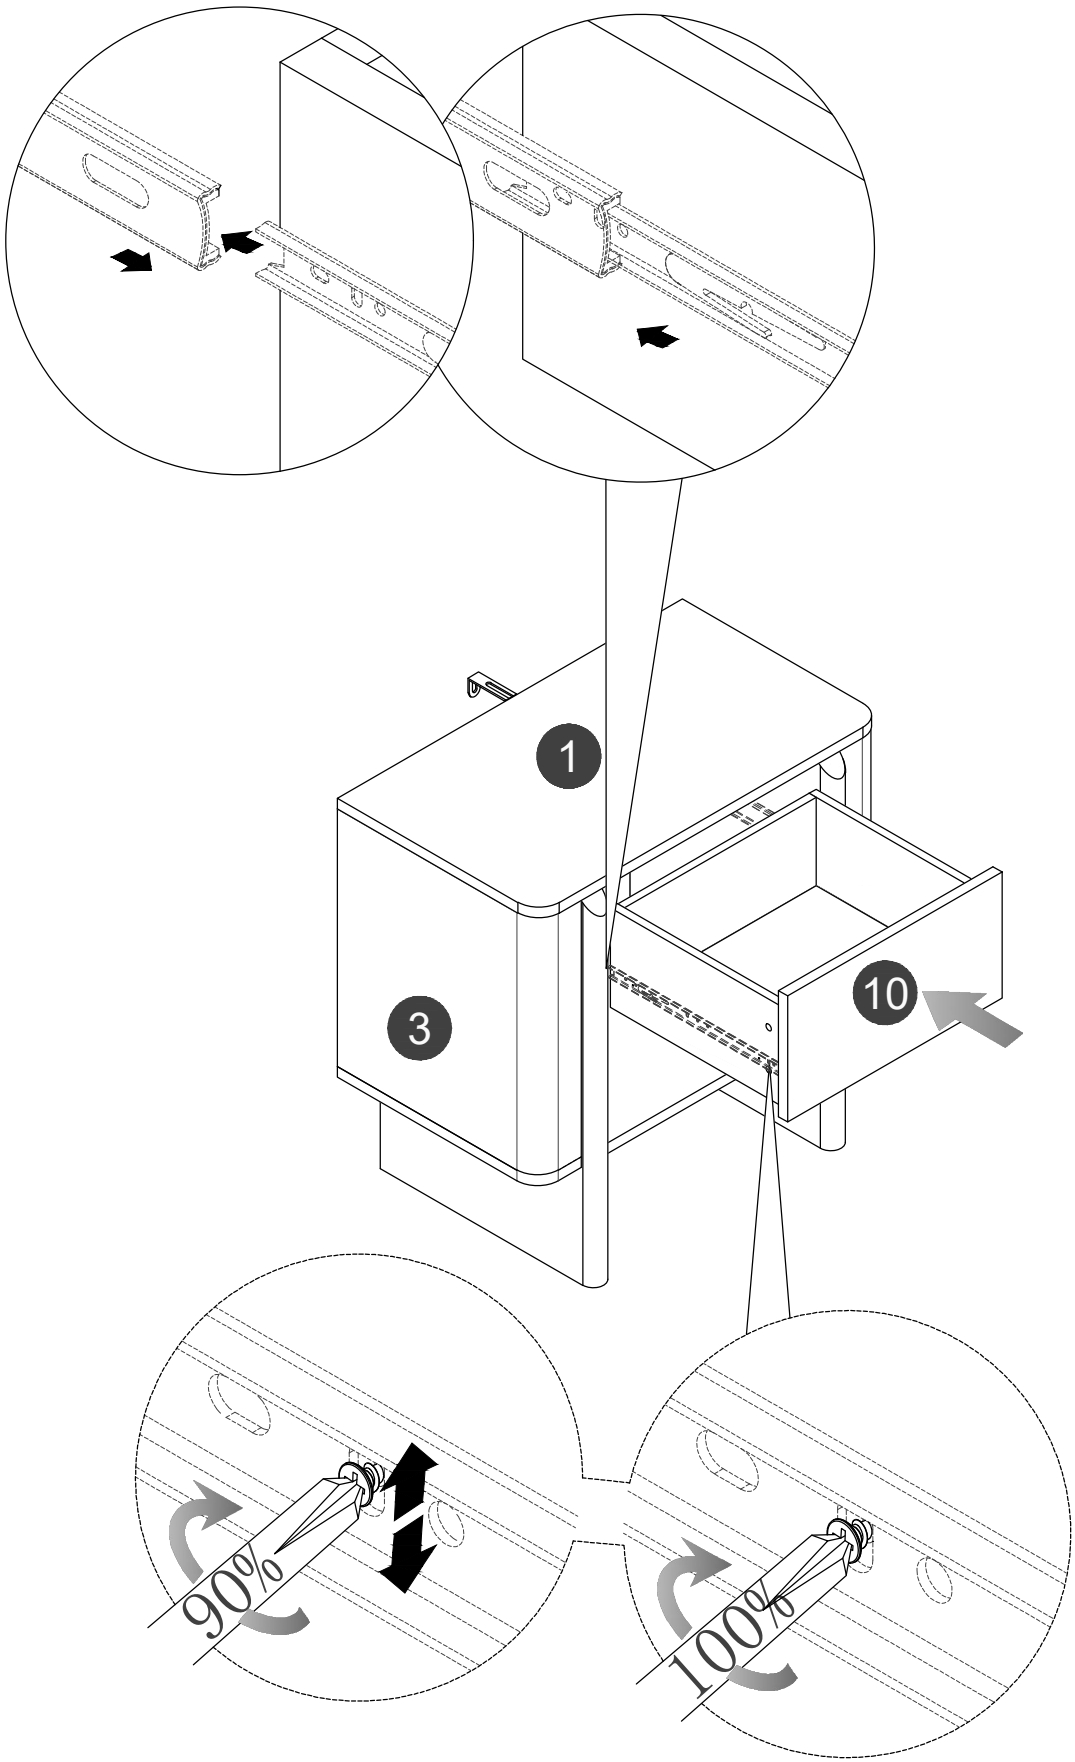

STEP 17

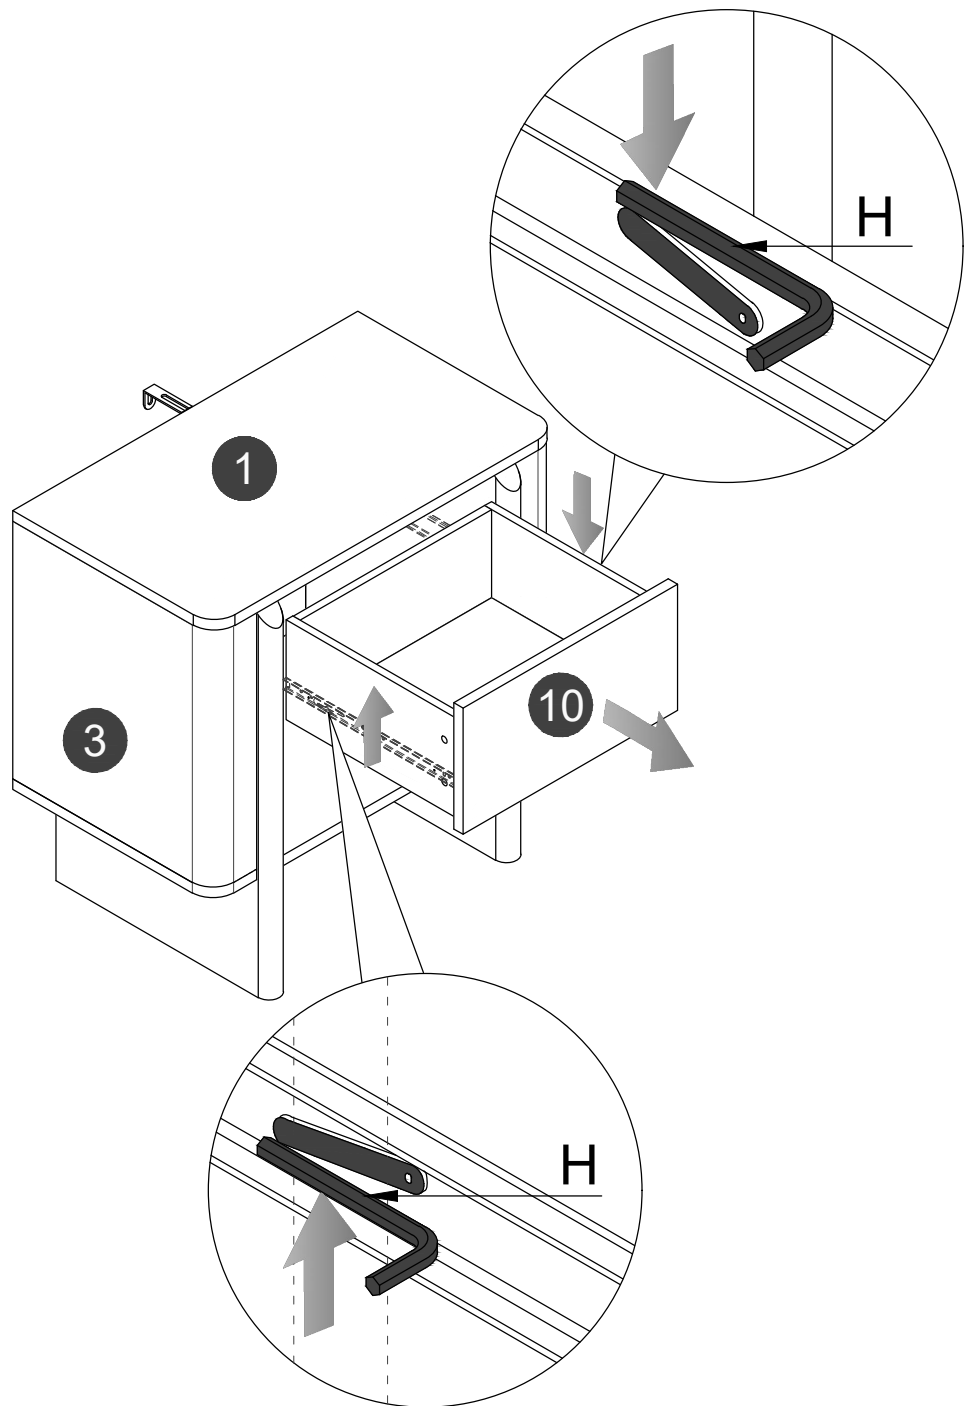

STEP 18

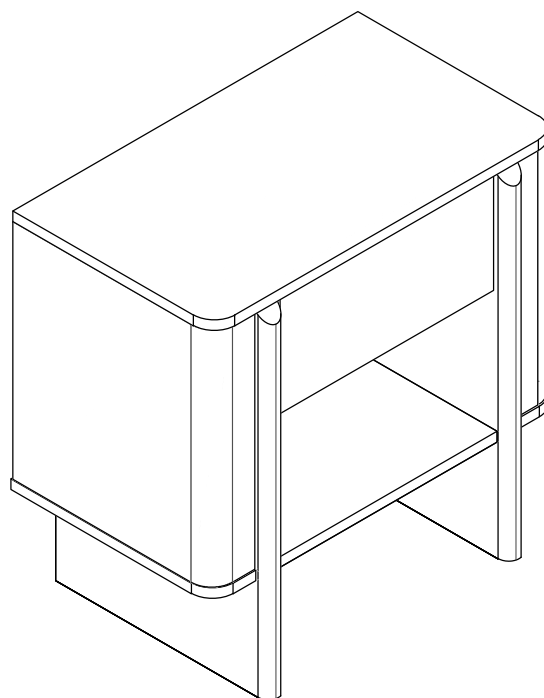

Finish